

2010 Infiniti G37 Coupe/Convertible

Quick Reference Guide



INFINITI.

QUICK REFERENCE GUIDE

Introduction

This easy-to-use Quick Reference Guide will help you to more fully appreciate your vehicle's superior features, unique functions and advanced technology.

- The Quick Reference Guide is intended to provide you with a user-friendly learning experience to quickly acquaint you with your new INFINITI vehicle.
- Refer to the Quick Reference Guide to learn how to personalize your vehicle's controls and equipment to maximize your driving comfort and convenience.

However, this guide is not intended to replace your vehicle Owner's Manual. For comprehensive vehicle safety information and product details, please refer to your Owner's Manual. It will help you to better understand the operation and proper maintenance of your new INFINITI vehicle.

Both INFINITI and your INFINITI dealer are dedicated to serving all your automotive needs. Your complete satisfaction is our primary concern. It is suggested that you read this Quick Reference Guide and your vehicle Owner's Manual thoroughly before contacting your INFINITI dealer with related questions.

contents

	Page
GETTING STARTED	
INFINITI Intelligent Key™ System	2
In-Dash Intelligent Key Port, Door Handle Request Switches, Outside Buzzer and Lockout Protection, Auto Re-lock Function, Push Button Ignition Switch, The Intelligent Key	
Automatic Door Locks	4
Opening/Closing the Windows	4
Opening the Fuel-Filler Door	5
Opening the Trunk	5
Driver and Front Passenger Seat Adjustment	5
Seat Belt Guide (Convertible)	6
Rear Passenger Entry/Exit (Convertible)	6
Rear Passenger Walk-In (Coupe)	6
Rain-Sensing Auto Wiper Feature (if so equipped)	6
Instrument Panel Layout	7
Front Passenger Air Bag Status Light	8
Vehicle Control Center	9
INFINITI Controller, Information Display Screen, Touch Screen Operation, Buttons Surrounding the INFINITI Controller	
DRIVING CONTROLS	
Steering Wheel Controls – Cruise Control/Intelligent Cruise Control (if so equipped)	12
Steering Wheel Controls – Audio and Bluetooth® Hands-free Phone System (if so equipped)	14
Tire Pressure Monitoring System	16
Vehicle Dynamic Control	16
Manual Shift Mode – Paddle Shifters (if so equipped)	16
Snow Mode ON/OFF Switch (Coupe)	17
RearView Monitor (if so equipped)	17
COMFORT	
Heater and Air Conditioner	18
Dual Zone Automatic Climate Control (if so equipped), Advanced Climate Control System	20
Heated Front Seats (if so equipped)	20
Climate Controlled Front Seats (Convertible - if so equipped)	21
MEDIA CENTER	
Audio System	22
How to Customize Radio Presets, How to Customize Tone Settings, USB Memory Operation (if so equipped), Music Box™ (if so equipped), Interface System for iPod® (if so equipped)	
DVD-Video Playback (if so equipped)	26
Bluetooth® Streaming Audio (if so equipped)	26
Bluetooth® Hands-free Phone System with Navigation (if so equipped)	27
Bluetooth® Hands-free Phone System without Navigation (if so equipped)	29
NAVIGATION	
INFINITI Navigation System (if so equipped)	32
Switching The Map View, Storing Your Home Address (and Other Addresses) In Your Address Book, Store Current Location, Setting a Street Address As A Destination, Moving Around Within A Map, Setting A Place As A Destination, Zagat® Restaurant Guide, XM NavWeather® Information	
CONVENIENCE	
INFINITI Voice Recognition System (if so equipped)	36
Speaking Phone Numbers, Voice Recognition User Guide, Making a Phone Call, Programming a Destination – Street Address, Alternate Command Mode	
Automatic Drive Positioner Memory System (if so equipped)	39
Seat Synchronization Function	
Trunk Release Power Cancel (ON/OFF) Switch	40
Opening/Closing the Hardtop (Convertible)	41
Opening the Hardtop Using the Driver Door Handle Request Switches, Hardtop Operation Indicators	
12-Volt Power Outlet (if so equipped)	42
Auto-Dimming Inside Mirror (if so equipped)	43
Homelink® Universal Transceiver (if so equipped)	43
Important Customer Information – Aluminum Alloy Wheels	43

INFINITI INTELLIGENT KEY™ SYSTEM

The Intelligent Key™ system allows you to lock and unlock all doors (including the fuel-filler door) and open the trunk, without having to remove the Intelligent Key from your pocket or bag. While inside the vehicle, it lets you start and stop the engine via push-button ignition, and – if so equipped – it can signal the seat, steering wheel, and outside (side view) mirrors to adjust to your personalized memory setting.



IN-DASH INTELLIGENT KEY PORT


To start the vehicle if the Intelligent Key battery becomes discharged, insert the Intelligent Key into the In-Dash Port. Push the Intelligent Key completely into the port until you feel it “engage.”



To Remove the Intelligent Key from the Port:

- Push the ignition switch to the **LOCK (OFF)** position.
- Pull the Intelligent Key out of the port.

Note: If you leave the Intelligent Key in the port when the ignition switch is toggled to the **LOCK (OFF)** position and the driver's door is opened:

- The indicator lights on both sides of the port will flash
- A key reminder chime will sound.
- And the Intelligent Key Removal indicator  will illuminate on the dot matrix display between the tachometer and speedometer.

DOOR HANDLE REQUEST SWITCHES

To Lock the Doors: Push any door handle Request Switch **once**.

To Unlock the Doors: Push any door handle Request Switch **once**. The corresponding door will unlock. Push the door handle Request Switch again within 5 seconds to unlock all doors.

Note: The Intelligent Key must be within operating range.



OUTSIDE BUZZER AND LOCKOUT PROTECTION

If you exit the vehicle and attempt to lock the doors using either front door handle Request Switch while the Intelligent Key is inside the vehicle, a beep tone will sound and the doors **will not** lock.

AUTO RE-LOCK FUNCTION

When the doors are unlocked with the door handle Request Switch or the  **UNLOCK** button on the Intelligent Key, for security, after one minute all doors will automatically re-lock unless the following occurs:

- Any door is opened.
- The ignition switch is pushed to **ACC** or **ON** position.

getting started

PUSH BUTTON IGNITION SWITCH

To Start the Engine:

With the Intelligent Key inside the vehicle:



Automatic Transmission Vehicles

- 1 Confirm the transmission is in **P (PARK)**.
- 2 **Depress the brake.**
- 3 Push the ignition switch to the **ON** position. Release the ignition switch when the engine has started.

Manual Transmission Vehicles

- 1 Put the transmission in **N (NEUTRAL)**.
- 2 Depress the brake and clutch fully to the floor.
- 3 Push the ignition switch to the **ON** position. Release the ignition switch when the engine has started.

To Stop the Engine:

Put the transmission in **P (PARK)** or in **N (NEUTRAL)** and push the ignition switch to the **LOCK (OFF)** position.



To Change Ignition Switch Positions: (With the engine stopped and foot off brake)

In the **LOCK (OFF)** position, push the ignition switch:

- **One time** to change to **ACC (Accessory)** position.
- **Two times** to change to **ON** position.
- **Three times** to return to **LOCK (OFF)** position.

INFINITI INTELLIGENT KEY™

Mechanical Key

The mechanical key can be used to lock or unlock all doors, the trunk, the glove box and the trunk pass-through.



LOCK Button

Press once to lock all doors, the trunk and the fuel-filler door.

PANIC ALARM Button

Press and hold down for more than 1 second to sound the horn and flash the headlights. Press any button on the intelligent key to stop the panic alarm.

TRUNK-RELEASE Button

Press and hold down for more than 1 second to open the trunk.

UNLOCK Button

Press once to unlock the driver's door and the fuel-filler door.

Press again within 5 seconds to unlock all other doors. Press and hold down to open the windows.

Press and hold down to open the windows.

Opening Windows

Press and **hold** down the **UNLOCK** button for more than 3 seconds, and continue pressing until the windows are completely open. Release the **UNLOCK** button to stop the windows from opening.

Deactivating/Activating the Horn Beep Feature

Your vehicle is set to sound the horn when locking the vehicle.

To Deactivate: Press and hold down the **LOCK** and **UNLOCK** buttons together for at least 2 seconds. The hazard indicator lights will flash three times to confirm the operation is complete.

To Activate: Press and hold down the **LOCK** and **UNLOCK** buttons together for at least 2 seconds. The hazard indicator lights will flash once and the horn will chirp once to confirm the operation is complete.


For Vehicle Valet Hand-Off

- 1 Remove the Mechanical Key from the Intelligent Key and use it to lock the glove box.
- 2 Hand the Intelligent Key to the valet. Keep the Mechanical Key on your person.
- 3 When you retrieve your vehicle and Intelligent Key from the valet, unlock the glove box with the Mechanical Key and reinsert the Mechanical Key into the Intelligent Key.

AUTOMATIC DOOR LOCKS

- All doors lock automatically when the vehicle speed reaches 15 MPH (24 km/h).
- All doors unlock automatically when the ignition switch is placed in the **OFF** position.

The automatic unlock function can be deactivated or activated. To deactivate or activate the automatic door unlock system, perform the following procedure:

- 1 Close all doors.
- 2 Place the ignition switch in the **ON** position.
- 3 Within 20 seconds of performing Step 2, push and hold the power door lock switch to the  position (UNLOCK) for more than 5 seconds.
- 4 When activated, the hazard indicator will flash twice. When deactivated, the hazard indicator will flash once.
- 5 The ignition switch must be placed in the **OFF** and **ON** position again between each setting change.



When the automatic door unlock system is deactivated, the doors do not unlock when the ignition switch is placed in the **OFF** position. To unlock the door manually, use the inside lock knob or the power door lock switch (driver's or front passenger's side).

OPENING/CLOSING THE WINDOWS

Push down or pull up the driver's side power window switches to open or close the corresponding window. The driver's side power window feature will automatically open or close the front door windows all the way.

For partial window opening or closing: Push or pull the window switch in the opposite direction during its auto-up/down operation.

Note: You must pull up and hold the rear window switches to completely close the corresponding rear window.

Push down or pull up the passenger side window switch to open or close the passenger side window.

Notes:

- The power windows switches are still active (for 45 seconds) after the ignition is pushed to the **OFF** position, or until a door is opened.
- When the hardtop operating switch is pressed to **OPEN** or **CLOSE**, the driver's side and passenger side windows will automatically fully open. Pulling up and holding both driver's side front power window switches will raise both the front door and rear windows.




getting started

OPENING THE FUEL-FILLER DOOR

- 1 Unlock the doors with the INFINITI Intelligent Key™, door handle Request Switch, power door lock switch or Mechanical Key.
- 2 Push in on the left-hand side of the fuel-filler door to open.



OPENING THE TRUNK

In addition to the Trunk-Release button  on the Intelligent Key, you can open the trunk by doing one of the following:

- Push the Trunk-Release switch on the Instrument Panel.
- With the Intelligent Key on your person, press the Trunk-Release button located on the left taillight.



DRIVER AND FRONT PASSENGER SEAT ADJUSTMENT

(if so equipped)

Power Seats:

 To Move the Driver's Seat Forward or Backward

 To Recline the Seat

 
 To Lift the Seat


 To Adjust Seat Side Support

 To Slide the Passenger's Seat



Manual Thigh Extension (if so equipped):

 Pull up and hold the lever

 



Manual Lumbar support



SEAT BELT GUIDE (CONVERTIBLE)

When the seat belt guide is used for the front seat, the seat belt can be easily pulled and connected to the seat belt buckle. Unsnap the seat belt guide, install the seat belt at the front of the seat and secure the seat belt guide again. When inserting the seat belt into the seat belt guide, make sure it is flat so that it will retract correctly without becoming stuck or twisted.

REAR PASSENGER ENTRY/EXIT (CONVERTIBLE)


For ease in entering and exiting the rear passenger areas of the vehicle, perform the following steps:

- 1 Unsnap the front seatbelt guide and release the seat belt.
- 2 Pull the **seatback lever** upward to flip the seatback forward.
- 3 Press the **seatback button** to slide the front seat forward.

To Return the Front Seat to its Original Position:

- 1 Push or pull the seatback backward until it locks in place.
- 2 Press the **seatback button** to slide the front seat backward.
- 3 Reposition the seat belt and reinstall the seatbelt guide securely.

Note: To **STOP** the front seat from sliding, press the **seatback button** again, or press the **seat slide switch**.

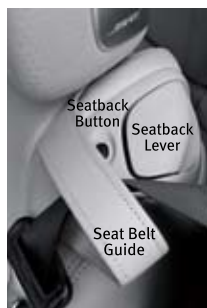

REAR PASSENGER WALK-IN (COUPE)

For ease in entering and exiting the rear passenger areas of the vehicle, perform the following steps:

- 1 Pull the **seatback lever** upward to fold the front seatback forward.
- 2 Press the **seatback button** to slide the front seat forward.

To Return the Front Seat to its Original Position:

- 1 Push or pull the seatback backward until it locks in place.
- 2 Press the **seatback button** to slide the front seat backward.

Note: To stop the front seat from sliding, press the **seatback button** again.



RAIN-SENSING AUTO WIPER FEATURE

(if so equipped)

Using a rain-sensing sensor located in the upper part of the windshield, the rain-sensing auto wiper system, can automatically adjust the wiper speed in accordance to the rainfall and the vehicle's speed.

To Turn ON the Rain-Sensing Auto Wiper Feature:


- 1 Push the ignition switch button to the **ON** position.
- 2 Pull the wiper control lever down one notch to the **INT (Intermittent)** position. The wiper will sweep once indicating the rain-sensing feature is **ON**.

The level of rain sensor sensitivity can be adjusted by rotating the knob toward the front (High) or toward the rear (Low).


To turn OFF the rain-sensing auto wiper feature

Pull up the wiper control lever to the OFF position, or, pull down the lever to the LO or HI position. The rain-sensing auto wipers will turn OFF when the rain sensor does not detect rain.

Note: The rain-sensing auto wipers are intended for use during rain. If the wiper control lever is left in the INT position, the wipers may operate unexpectedly when moisture hits the sensor.


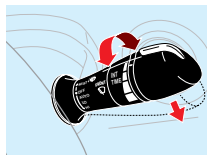


getting started

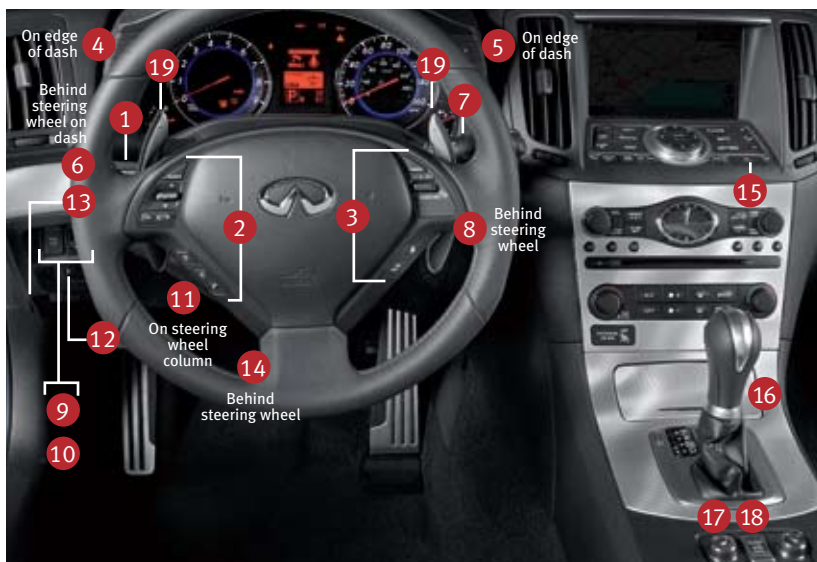


INSTRUMENT PANEL LAYOUT

  - 1 Headlight, Fog Light and Turn Signal Controls
- 2 Steering Wheel Controls for Audio and Bluetooth® Hands-free Phone Systems – if so equipped
- 3 Cruise Control/Intelligent Cruise Control Buttons – if so equipped
- 4 Instrument Panel Brightness Control
- 5 Trip Computer Switches
- 6 Trip A/B Reset Button
- 7 Windshield Wiper and Washer Controls
- 8 Push Button Ignition Switch
- 9 Vehicle Dynamic Control (VDC) OFF Button
- 10 Trunk-Release Switch
- 11 Steering Wheel Power Tilt/Telescopic Control – if so equipped
- 12 Intelligent Key Port
- 13 Hood-Release Lever
- 14 Manual-Tilt/Telescopic Steering Wheel Lock Lever – if so equipped
- 15 Hazard Warning Lights Button
- 16 7-Speed Automatic Transmission Control Lever with Manual Shift Mode – if so equipped
- 17 Heated Front Seat Controls or Climate-Controlled Seat Dials – if so equipped
- 18 Hard Top Open/Close (Convertible)
- 19 Paddle Shifters – if so equipped

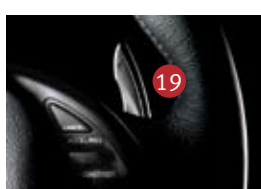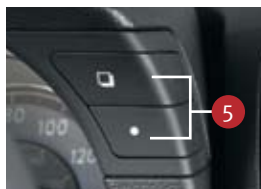



- 4 Instrument Panel Brightness Control
- 5 Trip Computer Switches
- 9 Vehicle Dynamic Control (VDC) OFF Button
- 10 Trunk-Release Switch
- 11 Steering Wheel Power Tilt/Telescopic Control – if so equipped
- 12 In-Dash Intelligent Key Port
- 13 Hood-Release Lever
- 17 Heated Front Seat Controls or Climate-Controlled Seat Dials – if so equipped
- 18 Hard Top Open/Close - Convertible
- 19 Paddle Shifters – if so equipped

FRONT PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the INFINITI Advanced Air Bag System. Under some conditions, depending on the type of occupant or object detected in the front-passenger's seat by the occupant classification sensor, the front passenger air bag is designed to automatically turn **OFF**. When the front passenger air bag is **OFF**, the front passenger air bag status light  will illuminate.*



For example:

- When the system detects that the front-passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the front-passenger air bag status light  will illuminate to indicate that the front-passenger air bag is **OFF** and will not inflate in a crash.
- When the front-passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the front passenger air bag status light  will not illuminate to indicate that the front passenger air bag is operational.

*When the system detects that the front-passenger's seat is unoccupied, the passenger air bag status light will not illuminate even though the front passenger air bag is OFF.

getting started



Vehicles with the INFINITI Navigation system



Vehicles without the INFINITI Navigation system

VEHICLE CONTROL CENTER

The following buttons and controls are used together to operate most functions displayed on your vehicle's Information Display screen:

- INFINITI Controller
- Buttons and Controls surrounding the INFINITI Controller
- Audio System Controls
- Heater and Air Conditioning Controls
- Touch Screen Operation (for vehicles with the INFINITI Navigation system)

Refer to the 2010 INFINITI Navigation System Owner's Manual for more details about Touch Screen operations.

INFINITI CONTROLLER

Buttons located on or around the INFINITI Controller serve various purposes for navigating the Information Display screen and choosing options. As you use the vehicle controls, you will find the control combination that best suits your needs.

1 Center Dial

Rotate the Center Dial to navigate **UP**, **DOWN** and **ACROSS** the Information Display screen, to highlight items for additional information and to make changes to settings.

2 Main Directional Buttons

Four Main Directional buttons (marked with arrows) on the face of the INFINITI Controller can also be used to perform the same functions as the Center Dial.

3 Additional Directional Buttons (for vehicles with the INFINITI Navigation system)

Four additional buttons (marked with small dashes) are located between the Main Directional buttons. When using the Navigation system for instance, these buttons can be used in different ways to make "fine-tuned" movements around the Navigation Map screen.

4 ENTER Button


Press to select menu items highlighted on the Information Display Screen.

5 BACK Button

Press to return to the previous function shown on the Information Display Screen, to cancel a function if it is not complete and to delete characters when using the on-screen keyboard.

6 VOICE Button (for vehicles with the INFINITI Navigation system)

Press to repeat a Navigation instruction (if a destination has been set).

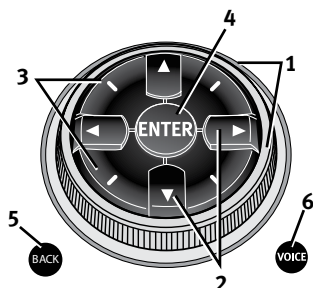

INFORMATION DISPLAY SCREEN

Vehicle functions are viewed in menus on the Information Display Screen. As menu items are selected, additional information may display on the screen.



TOUCH SCREEN OPERATION

(for vehicles with the INFINITI Navigation system)

This feature allows you to perform the same operations controlled by the INFINITI Controller simply by selecting menu items on the Information Display Screen.

BUTTONS SURROUNDING THE INFINITI CONTROLLER

DEST

DEST Button (for vehicles with the INFINITI Navigation system)
Press to set a destination in the Navigation system.

ROUTE

ROUTE Button (for vehicles with the INFINITI Navigation system)
Press to display Route related information and settings.

MAP

MAP Button (for vehicles with the INFINITI Navigation system)
Press to display the Map screen.

PHONE

PHONE Button (for vehicles with the INFINITI Navigation system)
Press to display functions of the Bluetooth® Hands-free Phone System.

INFO

INFO Button
Press the **INFO** button to access the following vehicle information:

- Fuel Economy
- Maintenance
- Where Am I? (for vehicles with the INFINITI Navigation system)
- Weather and Traffic Info.* (for vehicles with the INFINITI Navigation system)
- Navigation Version (for vehicles with the INFINITI Navigation system)
- GPS Satellite Information (for vehicles with the INFINITI Navigation system)
- Voice Recognition (for vehicles with the INFINITI Navigation system)

SETTING

SETTING Button
Press to display the Settings menu.

STATUS

STATUS Button
Press repeatedly to display the status of audio, climate control, fuel consumption and navigation system functions (if so equipped).

Note: If you are listening to a XM® Satellite Radio channel, when you press the STATUS button you will be able to view information about the music playing, including the XM® Channel name/music genre, artist and song title.

ZOOM OUT

ZOOM OUT Button (for vehicles with the INFINITI Navigation system)
Press to increase the Map view, showing more area.

ZOOM IN

ZOOM IN Button (for vehicles with the INFINITI Navigation system)
Press to decrease the Map view, showing greater detail.

getting started



INCREASE BRIGHTNESS Button (for vehicles with the INFINITI Navigation system)
Press to increase the Information Display Screen brightness.



DECREASE BRIGHTNESS Button (for vehicles with the INFINITI Navigation system)
Press to decrease the Information Display Screen brightness.



DAY•NIGHT/OFF/BRIGHTNESS Button

- Press to switch the Information Display Screen between day view and night view.
- While the adjustment bars appear on the screen, adjust the Information Display Screen brightness **UP** or **DOWN** by turning the INFINITI Controller Center Dial.
- Press and hold down to turn the display **OFF**. To resume display, press again.



AM•FM•SAT Button (for vehicles with the INFINITI Navigation system)
Press to change radio bands: AM -> FM1 -> FM2 -> XM1 -> XM2 -> XM3 -> AM, etc., (requires an active XM® satellite radio subscription).



DISC/AUX Button (for vehicles with the INFINITI Navigation system)
Press to activate and display the following modes:

- Audio CD or CD with MP3/WMA/AAC in the in-dash CD player (if a disc is loaded in the CD player)
- DVD
- iPod® (if a compatible device is connected)
- Music Box™ (if songs are stored)
- USB Memory (if a compatible device is connected)
- Bluetooth® Streaming Audio (if a compatible device is connected)



RADIO AM•FM Button (for vehicles without the INFINITI Navigation system)
Press to change radio bands: AM -> FM1 -> FM2 -> AM, etc.



AUX Button (for vehicles without the INFINITI Navigation system)
Press to activate and display the following modes:

- XM Radio (requires an active XM® satellite radio subscription)
- USB Memory (if a compatible device is connected)
- iPod® (if so equipped and if a compatible device is connected)



DISC Button (for vehicles without the INFINITI Navigation system)
Press to activate and display the following modes:

- Audio CD or CD with MP3/WMA in the in-dash CD player (if a disc is loaded in the CD player)
- Music Box™ (if songs are stored)


STEERING WHEEL CONTROLS

CRUISE CONTROL/INTELLIGENT CRUISE CONTROL

(if so equipped)

Cruise Control allows you to set and maintain a cruising speed without having to keep your foot on the accelerator.

- 1 **CANCEL Switch** – Push to turn the system OFF without erasing the set speed.
- 2 **ACCEL/RES•COAST/SET Switch** – Push to set, accelerate/ decelerate or resume speed.
- 3 **CRUISE ON/OFF Switch** – Push to turn the system ON/OFF.

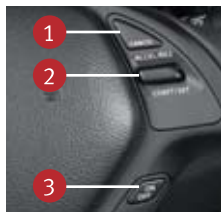

To Set Cruising Speed:

- 1 Push the **CRUISE ON/OFF** switch. The **CRUISE** indicator light (located on the dot matrix display between the tachometer and speedometer) will illuminate.
- 2 Accelerate to the desired speed. (The system can be set to any speed between 25 and 89 MPH.)
- 3 Push **DOWN** on the **COAST/SET** switch and release. The **CRUISE SET** indicator light will illuminate indicating Cruise Control is set to the desired speed.

To Cancel Set Cruising Speed:


- Push the **CRUISE ON/OFF** switch.
- Push the **CANCEL** switch.
OR
- Tap the brake pedal.

INTELLIGENT CRUISE CONTROL

(if so equipped)

Intelligent Cruise Control (ICC) allows you to set a cruising speed and maintain a selected distance to a vehicle traveling ahead in the same lane and direction within the speed range of 25 to 89 MPH.

- 1 **CANCEL Switch** – Push to turn the system OFF without erasing the set speed.
- 2 **ACCEL/RES•COAST/SET Switch** – Push to set, accelerate/ decelerate, or resume speed.
- 3 **Following Distance Switch** – Push to set the following distance to a vehicle ahead.
- 4 **ON/OFF Switch** – Push to turn the system ON/OFF and select the cruise control mode.

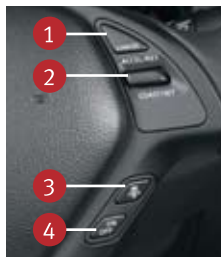

The Intelligent Cruise Control system can be set to one of two cruise control modes:

- Vehicle-to-vehicle distance control mode
- Fixed speed cruise control mode

Vehicle-To-Vehicle Distance Control Cruise

Push and release the **ON/OFF** switch. The cruise indicator light, set distance indicator and set vehicle speed indicator lights (located on the dot matrix display between the tachometer and speedometer) will illuminate in **STANDBY** mode.



driving controls

To Set Cruising Speed:

- 1 Accelerate to the desired speed. (The system can be set to any speed between 25 and 89 MPH.)
- 2 Push **DOWN** on the **COAST/SET** switch and release. The vehicle ahead detection and set vehicle speed indicator lights will illuminate. Intelligent Cruise Control will be set to the desired speed.


To Cancel Set Cruising Speed:

- Push the **ON/OFF** switch.
 - Push the **CANCEL** switch.
- OR
- Tap the brake pedal.

To Set Vehicle-To-Vehicle Distance:

The distance to the vehicle ahead can be set at any time depending on traffic conditions. Push the **Distance** switch repeatedly to change between **long**, **middle** and **short**. The distance defaults back to long when the vehicle is started.

- When a vehicle **IS NOT** detected ahead of you in the lane, the vehicle-to-vehicle **set distance** control mode will maintain the **set speed**.
- When a vehicle **IS** detected ahead of you in the lane, the vehicle-to-vehicle **set distance** control mode will adjust the **set cruising** speed range to maintain the set distance.

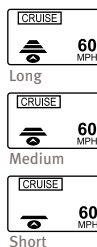

Note: If your vehicle moves closer to the vehicle ahead due to rapid deceleration of that vehicle, or if another vehicle cuts into the traveling lane, a warning chime will sound and the vehicle distance indicator light will blink. Depress the brake pedal and slow your vehicle to maintain a safe vehicle distance.

Automatic Cancellation

When your vehicle speed falls below 20 MPH and the ICC system does not detect a vehicle traveling ahead in the same lane and direction, a chime will sound and ICC will be canceled.

Note: The Intelligent Cruise Control system cannot detect a vehicle already stopped in front of you, and will cancel operation if your vehicle is stopped for more than a few seconds.

Fixed Speed-Control Cruise

To Set Cruising Speed:

- 1 While Cruise Control is **OFF**, push the **ON/OFF** switch and hold down for **more than 1.5 seconds**. The **CRUISE** indicator light **CRUISE** (located on the dot matrix display between the tachometer and speedometer) will illuminate.
- 2 Accelerate to the desired speed.
- 3 Push **DOWN** on the **COAST/SET** switch and release. The **SET** indicator light **SET** will illuminate. Cruise Control should be set to the desired speed.

To Switch Between the Two Cruise Control Modes:

When one of the two cruise modes is in use, you must turn **OFF** the system, and then turn it **ON** again (as instructed above) to select the other Cruise Control mode.

Note: There are certain conditions under which vehicle-to-vehicle distance-control cannot be set or will automatically cancel. Some conditions are:

- When rain, snow or dirt covers the system sensor (located in front bumper opening).
- When the windshield wiper is operated at low or high speed.
- When strong light shines directly on the front of the vehicle (e.g. during sunrise or sunset).

STEERING WHEEL CONTROLS

AUDIO AND BLUETOOTH® HANDS-FREE PHONE SYSTEM

(if so equipped)

For Vehicles with the INFINITI Navigation System

1 SOURCE Select Button

Press to activate and display the following modes:

- Radio bands (AM, FM and SAT)
- CD/DVD (if a disc is inserted)
- Music Box™ (if songs are stored)
- USB/iPod® (if a compatible device is connected*)
- Bluetooth® Streaming Audio

*If no audio is heard when iPod® mode is activated, confirm that a song is selected.

2 SCREEN NAVIGATION and ENTER Switch

Push the **ENTER** switch **UP ▲** or **DOWN ▼** to navigate UP, DOWN and ACROSS the vehicle's Information Display Screen. When the desired item is highlighted on the screen, press **ENTER** to select it.

For Radio:

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to page through the radio preset stations on each band currently selected.
- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to skip to the previous/next radio station on the band (AM, FM) or category (SAT, if Satellite Radio is activated) currently selected.

For Audio CD/CD with MP3/WMA/AAC:

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to return to the beginning of the current track or skip to the next track.
- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to skip to the previous/next folder on a CD with MP3/WMA/AAC.

For Music Box™:

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to return to the beginning of the current track or skip to the next track.
- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to skip to the previous/next playlist.

For iPod®:

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to skip to the previous/next track.
- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to skip to the next or previous index.

For USB Memory:

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to skip to the previous/next track.
- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** skip to the next folder number.



driving controls

 
For Bluetooth® Streaming Audio:

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to skip to the previous/next track.



3 VOLUME CONTROL Switch

Push the **-** or **+** side of the **VOLUME CONTROL** switch to decrease or increase the volume of the source currently playing.

4 BACK Button

Press the **BACK** button  to return to the previous function shown on the vehicle's Information Display Screen, to cancel a function if it is not complete and to delete characters when using the on-screen keyboard.

5 TALK Button & PHONE Button

- Press the **TALK** button  to activate the INFINITI Voice Recognition system.
- If a compatible Bluetooth®-enabled cellular phone has been connected to the vehicle and is selected, press the **PHONE** button  to initiate, answer or hang up a call.

For Vehicles **without** the INFINITI Navigation System

1 SOURCE Button

Press to activate and display the following modes:

- Radio bands (AM, FM and SAT)
- Audio CDs or CDs with MP3/WMA (if a CD is inserted into the in-dash CD player)
- Music Box™ (if songs are stored)
- USB/iPod® (if a compatible device is connected*)

*If no audio is heard when toggled to iPod® mode, confirm that a song is selected.

2 TUNING Switch

For Radio:

- Push the switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to page through the radio preset stations on each band currently selected.
- Push the switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to seek the previous/next radio station on the band currently selected (AM, FM) or previous/next XM® category (requires an active XM® satellite radio subscription).

For Audio CDs and CDs with MP3/WMA:

- Push the switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to return to the beginning of the current track or skip to the next track.
- Push the switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to skip to the previous/next folder on a CD with MP3/WMA.

For iPod®:

- Push the switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to skip to the previous/next track.
- Push the switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to scroll a list by the first letter.






For USB Memory:

- Push the switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to skip to the previous/next track.
- Push the switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** skip to the next folder number.


3 VOLUME CONTROL Switch

Press the – or + **VOLUME CONTROL** switch to decrease or increase the volume of the source currently playing.

4 TALK/PHONE & PHONE END Buttons – if so equipped

- Press the **TALK/PHONE** button  to activate the INFINITI Voice Recognition system.
- If a compatible Bluetooth®-enabled cellular phone has been connected to the vehicle and is selected, press the **TALK/PHONE** button  to answer a phone call.
- Press the **PHONE END** button  to end a phone call or to cancel an INFINITI Voice Recognition session.

TIRE PRESSURE MONITORING SYSTEM

 

This system monitors tire pressure. If the low tire pressure warning light  illuminates, check the tire pressure in all four tires.

Adjust the low tire pressure to the recommended **COLD** tire pressure shown on the Tire and Loading Information label located in the driver's door opening. After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16 MPH (25 km/h) to activate the TPMS and turn off the low tire pressure warning light.

VEHICLE DYNAMIC CONTROL

The Vehicle Dynamic Control (VDC) system monitors driver inputs and vehicle motion. Under certain conditions, it controls braking and engine output to help the driver in handling the vehicle. VDC does not prevent accidents due to careless or dangerous driving techniques. Always be mindful of vehicle speed and driving conditions. VDC may need to be temporarily shut off if you are trying to free a vehicle stuck in snow or mud.



- Push the Vehicle Dynamic Control (**VDC**) **OFF** switch to deactivate the VDC system. The  light will illuminate in the instrument panel gauge area.
- Push the Vehicle dynamic control (**VDC**) **OFF** switch again to activate the VDC system. The  light will turn off in the instrument panel gauge area.
- The VDC system is active while the vehicle is running until the switch is pushed to turn off.

MANUAL SHIFT MODE – PADDLE SHIFTERS

(if so equipped)

When the transmission is in **DS (DRIVE SPORT)**, the paddle shifters located on the **LEFT** and **RIGHT** side of the steering wheel allow you to enjoy manual gear selection — including downshift rev matching — with a pull of the paddle shifter lever.



driving controls

When the transmission is in **D (DRIVE)** the paddle shifters may be used to temporarily change gears manually. Once the vehicle detects that the paddle shifters are no longer being used, the transmission will automatically return to **D (DRIVE)**. Additionally, you can pull and hold the **(+)** paddle for 1.5 seconds to resume **D (DRIVE)** at any time.



Paddle Shifter Operation (if so equipped)

To Shift Up: Pull the **+** (up) **right-side** paddle shifter towards you. The transmission will shift to a higher range.

To Shift Down: Pull the **-** (down) **left-side** paddle shifter towards you. The transmission will shift to a lower range.

SNOW MODE ON/OFF SWITCH (COUPE)

(if so equipped)

Driver-selectable “Snow Mode” helps improve low speed traction for slick weather conditions.

- Push the **SNOW** switch to the **ON** position for slick road conditions. The indicator light on the switch will illuminate.
- Push the button to **OFF** for normal operation.



REARVIEW MONITOR

(if so equipped)


When the transmission is in **R (REVERSE)**, the Information Display screen will automatically change to view the area behind the vehicle.

Approximate Distance to Objects:

Green = 7 - 10 feet

Yellow = 3 feet

Red = 1.5 feet

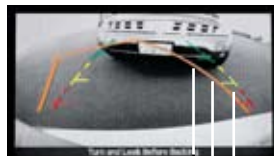



HEATER AND AIR CONDITIONER DUAL ZONE AUTOMATIC CLIMATE CONTROL (if so equipped)



To Turn ON/OFF the Climate Control System:

- Push the **AUTO** knob to turn **ON** the system.
- Press the **OFF** button to turn **OFF** the system.



Note: The Climate Control system will activate using the settings last selected.

The **AUTO** mode setting can be used year round with the top up or down (convertible). It allows the system to self adjust to maintain a selected temperature (automatic cooling and/or dehumidified heating). Air flow distribution and fan speed are also controlled automatically.

AUTO Mode vs. DUAL Mode:

- **AUTO** mode allows the driver to control temperature for self and front-passenger.
- **DUAL** mode allows the driver and front-passenger control of their own cabin temperatures.



Press or rotate the **DUAL** knob to set passenger side temperature. An indicator light near the **DUAL** knob will illuminate and the word "**DUAL**" will display on the Information Display Screen. Press the **DUAL** knob again to turn **OFF DUAL mode**.

To Change Temperature Settings:





- In **AUTO** mode, rotate the **AUTO** knob to increase or decrease the temperature and set it to the desired level. For normal automatic climate control operation, adjust the temperature to about 75°F.



- In **DUAL** mode, rotate the **DUAL** knob to adjust the front-passenger's temperature setting and rotate the **AUTO** knob to adjust the driver's temperature setting.

To Control Fan Speed:



- 1 Press the **Fan Speed Control** buttons,  or  to manually adjust fan speed **UP** or **DOWN**. The fan speed indicator symbol on the Information Display screen will change as fan speed is increased/decreased. The mode will change from **AUTO** to **MANUAL** mode ("**AUTO**" no longer appears on the screen).



- 2 Press the **AUTO** knob to return to automatic control of fan speed.



To Turn ON the Air Conditioning:

Press the **A/C** button. The indicator light on the button will illuminate.



To Turn ON the Heat:

- 1 Press the **A/C** button until “**A/C OFF**” is displayed on the Information Display Screen and the indicator light on the **A/C** button turns **OFF**.
- 2 Rotate the **AUTO** knob (in **AUTO** mode) or the **AUTO** knob and **DUAL** knob (in **DUAL** mode) to increase or decrease cabin temperature.

Note: For optimum system operation, **DO NOT** set the inside cabin temperature lower than the outside air temperature.



To Choose Fresh or Recirculated Air:

Press the **Fresh Air/Air Recirculation (Intake Air Control)** button to select between:



- **Fresh (outside) air** for cooling/heating/defrosting. The indicator light under the button icon will illuminate when fresh air is selected.
- **Recirculated (inside) air** for maximum **A/C** cooling performance and to prevent unwanted outside odors from entering the vehicle. The indicator light under the button icon will illuminate when recirculated air is selected.

Notes:

- On vehicles equipped with the Automatic Climate Control system, the recirculated air mode cannot be activated when the system is set to **A/C** and the **Front Defroster** is **ON**.
- Extended use of recirculated air may cause the inside of the windows to fog up.
- While in **AUTO** mode, intake air is also controlled automatically. To manually control intake air while in **AUTO** mode, press the Intake Air Control button. To return to Automatic Control mode, press and hold down the Intake Air Control button for approximately 2 seconds. Both indicator lights on the button will flash twice. Intake air will once again be automatically controlled.



To Manually Change Air Flow:

Press the **MODE** button repeatedly to select air flow location.

- Air flows from center and side vents.
- Air flows from center, side vents and foot outlets.
- Air flows mainly from foot outlets.
- Air flows from the front defroster and foot outlets.

Note: The air flow indicator symbols will illuminate on the Information Display Screen.

To Turn ON/OFF the Front Defroster:



- 1 Press the **Front Window Defroster** button to turn it **ON**. The indicator light on the button will illuminate.

Notes:

- Pressing the Front Window Defroster button provides the best possible defrost action. This is the preferred method for quickly defrosting the window (rather than choosing the front defroster and foot outlets in Manual Air Flow control mode, which is less efficient).
- When you press this button, you may hear a click noise from the engine area. This is normal. The Air Conditioner compressor is being activated. With the **A/C ON**, moisture is pulled from the air, helping to defrost the inside of the windows more quickly.




- 2 Rotate the **AUTO** knob to set the desired temperature.



- 3 Press the **+ Fan Speed Control** button + to set fan speed to maximum.
- 4 Press the **Front Window Defroster** button again to turn it **OFF**, or press the **AUTO** knob to return to **AUTO** mode.



To Turn ON/OFF the Rear Defroster:

- 1 Press the **Rear Window Defroster** button  to turn it **ON**. The indicator light on the button will illuminate.
- 2 Press the button **again** to turn it **OFF**. Or, it will turn **OFF** automatically after approximately 15 minutes.

ADVANCED CLIMATE CONTROL SYSTEM



(if so equipped)

When the top is closed, the Advanced Climate Control system utilizes ion control purifiers and air intake control air filters automatically help keep the air inside the vehicle clean.

ION Control

(if so equipped)

Air quality within the vehicle is automatically adjusted when the heater or air conditioner is **ON**. The Plasmacluster™ ionizer helps remove or neutralize interior airborne contaminants. This ion control feature alternates between two modes: **Clean** and **Ion** Control.

- When **Clean** mode is operating, the ion symbol  on the vehicle's Information Display Screen will illuminate blue.
- When **Ion** mode is operating, the ion symbol  on the vehicle's Information Display Screen will illuminate green.


To Choose Outside Air or Automatic Air Intake

Press and hold the **Intake Air Control** button for more than 2 seconds to select between circulation modes:



- In **AUTO** mode, the indicator  on the Intake Air Control button is illuminated. The system will automatically control the air intake.



- To manually control the intake air while in **AUTO** mode, press the Intake Air Control button. The indicator  on the Intake Air Control button will illuminate. The system will recirculate the air in the vehicle.



- Press and hold the **Intake Air Control** button for more than 2 seconds to change the air circulation mode to allow air to flow from the outside. Both indicator lights on the **Intake Air Control** button will turn **OFF**.

- To return to **Automatic Control** mode, press and hold down the **Intake Air Control** button for approximately 2 seconds. Both indicator lights on the button will flash twice. Intake air will once again be automatically controlled.

HEATED FRONT SEATS

(if so equipped)

To Turn ON/OFF or Adjust the Driver's or Front-Passenger's Heated Seats:

Start the Engine



- Rotate the seat heater control to the right to turn **ON** the seat heater and to increase the temperature. The indicator light on the control dial will illuminate when the seat heater is **ON**.
- To turn **OFF** the seat heater, rotate the seat heater control all the way to the left. The indicator light on the control dial will go out when the seat heater is **OFF**.

CLIMATE CONTROLLED FRONT SEATS (CONVERTIBLE)

(if so equipped)


To Turn ON/OFF or Adjust the Driver's or Passenger's Climate-Controlled Seats:



Start the engine.

- Rotate the corresponding seat control to the heat side or to the cool side. The indicator light on the control dial knob will illuminate when the climate-controlled seat is **ON**.
- Rotate the corresponding seat control to the left for cool, or the right to increase the desired temperature.
- Rotate the corresponding seat control to the (**center**) position to turn **OFF** the climate controlled seat. The indicator light on the control dial turns **OFF** when the climate controlled seat is **OFF**.

Note: The climate-controlled seat blower remains on low speed for approximately 60 seconds and then increases fan speed, after turning the control dial **ON** or selecting the desired temperature.

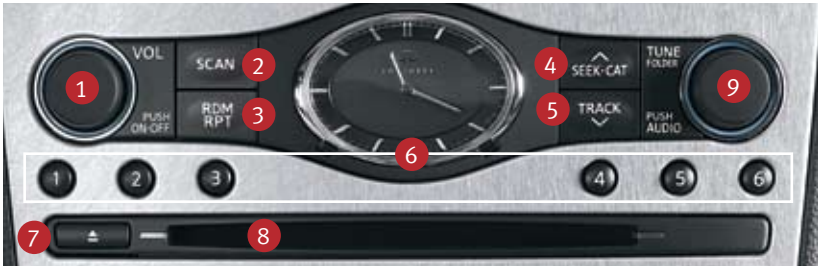

AUDIO SYSTEM

BOSE® AUDIO SYSTEM WITH AM•FM•SAT RADIO & IN-DASH COMPACT DISC (CD) PLAYER

Note:

- No satellite radio reception is available and no SAT-related information will be displayed when the **AM•FM•SAT/AUX Button** is pressed unless a XM® satellite radio service subscription is active.
- The Bose audio system has an automatic equalizer function. This function detects whether the hard top is opened or closed. It automatically adjusts the equalizer for the best sound. When the top is opening or closing the system temporarily interrupts the sound to make the adjustment. This is not a malfunction.

**AM-FM
SAT**

AM•FM•SAT Button (for vehicles with the INFINITI Navigation system)

Press to change radio bands: AM -> FM1 -> FM2 -> XM1 -> XM2 -> XM3 -> AM, etc. (requires an active XM® satellite radio subscription)

RADIO AM•FM

RADIO AM•FM Button (for vehicles without the INFINITI Navigation system)

Press to change radio bands: AM -> FM1 -> FM2 -> AM, etc.

AUX

AUX Button (for vehicles without the INFINITI Navigation system)

Press to activate and display the following modes:

- XM Radio (requires an active XM® satellite radio subscription)
- USB Memory (if a compatible device is connected)
- iPod® (if so equipped and if a compatible device is connected)

DISC

DISC Button (for vehicles without the INFINITI Navigation system)

Press to activate and display the following modes:

- Audio CD or CD with MP3/WMA in the in-dash CD player (if a disc is loaded in the CD player)
- Music Box™ (if songs are stored)

**DISC
AUX**

DISC/AUX Button (for vehicles with the INFINITI Navigation system)

Press to activate and display the following modes:

- Audio CD or CD with MP3/WMA/AAC in the in-dash CD player (if a disc is loaded in the CD player)
- DVD
- iPod® (if a compatible device is connected)
- Music Box™ (if songs are stored)
- USB Memory (if a compatible device is connected)
- Bluetooth® Streaming Audio (if a compatible device is connected)

STATUS

STATUS Button

Press repeatedly to display the status of audio, climate control, fuel consumption and navigation (if so equipped) system functions.

Note: If you are listening to a XM® Satellite Radio channel, when you press the **STATUS** button you will be able to view information about the music playing, including the XM® Channel name/music genre, artist and song title.



1 VOL (VOLUME)/PUSH ON-OFF Knob

- Press to turn the audio system **ON/OFF**.
- Rotate to adjust volume level.

SCAN

2 SCAN Button

For Radio:

Press to scan within a band (AM, FM, SAT). The scan stops at each station for 5 seconds. When you find a station that you want to listen to, press the button again to stop at that station.

RDM/RPT

3 RDM/RPT Button

Press the **RDM/RPT** button multiple times to change the play pattern as follows:

CD	CD with MP3/WMA	iPod®	Music Box
ALL DISC RPT	ALL DISC RPT	SHUFFLE OFF RPT OFF	ALL PLAYLIST RPT
1 DISC RPT	1 DISC RPT	SHUFFLE OFF 1 TRK RPT	1 PLAYLIST RPT
1 TRK RPT	1 FOLDER RPT	SHUFFLE OFF ALL TRK RPT	1 TRK RPT
ALL DISC MIX	1 TRK RPT	TRK SHUFFLE RPT OFF	ALL PLAYLIST MIX (RDM)
1 DISC MIX (RDM)	ALL DISC MIX	TRK SHUFFLE ALL TRK RPT	1 PLAYLIST MIX (RDM)
	1 DISC MIX (RDM)	ALBUM SHUFFLE RPT OFF	
	1 FOLDER MIX (RDM)	ALBUM SHUFFLE ALL TRK RPT	



4 SEEK•CAT Button

Press and release –

- **For AM/FM:** Seeks **BACKWARD**, stopping at the previous broadcasting station.
- **For SAT:** Push to tune to the previous XM® Satellite radio category.
- **For Audio CD, CD with MP3/WMA/AAC, USB/iPod®, Music Box™ and Bluetooth® Streaming Audio:** The track currently playing will replay from the beginning. Press again to select the previous track.

Press and hold down for **more than 1.5 seconds** –

- **For Audio CD, CD with MP3/WMA/AAC, USB/iPod®, Music Box™ and Bluetooth® Streaming Audio:** Rewinds through the track currently playing.



5 **TRACK Button**

Press and release –

- **For AM/FM:** Tracks **FORWARD**, stopping at the next broadcasting station.
- **For SAT:** Push to tune to the first channel of the next XM® Satellite radio category.
- **For Audio CD, CD with MP3/WMA/AAC, USB/iPod®, Music Box™ and Bluetooth® Streaming Audio:** Skips to the next track.

Press and hold down for **more than 1.5 seconds** –

- **For Audio CD, CD with MP3/WMA/AAC, USB/iPod®, Music Box™ and Bluetooth® Streaming Audio:** Fast-forwards through the track currently playing.

6 **Station Preset/Disc Select Buttons (1 - 6)**

Press to select preset radio stations.



7 **CD Eject Button**

- Press for **less than 1.5 seconds** to eject the CD currently playing.

8 **CD Insert Slot**

- Insert a CD into the slot to load it into the CD player.



9 **TUNE/FOLDER-PUSH/AUDIO Knob**

- Rotate the knob to manually tune radio stations **UP** or **DOWN** (e.g. tune from 105.1 to 105.3).
- Rotate the knob to select different Music Box™ songs by artist, category, etc., or to select MP3/WMA/AAC folders if a CD with MP3/WMA/AAC is in the in-dash CD player.
- Press the knob to display, then turn to adjust: Bass, Treble, Balance and Fade.

HOW TO CUSTOMIZE RADIO PRESETS

With the STATION PRESET buttons, 12 stations can be set for the FM band (6 each for FM1 and FM2), 18 for XM® radio (6 each for XM1, XM2 and XM3) and 6 stations can be set for the AM band.

To store a radio station in a preset:

- 1 Select FM, AM or XM®* radio band.
- 2 Tune to the desired station using the **SEEK/CAT** or **TRACK** buttons or the **TUNE/FOLDER•PUSH/AUDIO** knob.
- 3 Press and hold down the desired Station Preset button (1 - 6) until the radio mutes. Memorization is now complete.
- 4 Repeat the above steps to program additional stations.

*Only available if an XM® satellite radio service subscription is active.

HOW TO CUSTOMIZE TONE SETTINGS

Bass, Treble, Balance, Fade, Speed Sensitive Volume and Driver's Audio Stage

(if so equipped)

- 1 Press the **SETTING** button.
- 2 Select the "Audio" key.
- 3 Select the feature to be adjusted using the touchscreen or INFINITI Controller.



USB MEMORY OPERATION

(if so equipped)

- 1 Open the console lid and connect a USB memory device.
- 2 Press the **DISC/AUX** or **AUX** button repeatedly to switch to the USB memory mode.
- 3 When there are both audio and movie files in the USB memory, the mode select screen is displayed. Select the preferred contents to play. When there is only one type of file, the audio or movie operation screen is displayed and starts to play.

Note: To view movies on the vehicle's Information Display Screen, the transmission must be in **P (PARK)** with the parking brake engaged.

Music Box™

(if so equipped)

The Music Box™ audio system can store songs from CDs being played in the CD player.

To Record a CD:

- 1 Operate the audio system to play a CD.
- 2 Select the "REC" or "Start REC" key on the vehicle's Information Display Screen.

To Automatically Record Songs:

When the "Automatic Recording" function is **ON**, recording will start when a CD is inserted and begins to play in the CD player.

- 1 Press the **DISC/AUX** or **AUX** button until the Music Box™ mode displays on vehicle's Information Display Screen.
- 2 Select the "Menu" Key.
- 3 Select the "Music Box Setting Info" key (vehicles with INFINITI Navigation System).
- 4 Select the "Music Box Settings" key (vehicles with INFINITI Navigation System).
- 5 Select the "Automatic Recording" key.

To Play Recorded Songs:

Activate the Music Box™ system by using one of the following methods:

- 1 Press the **SOURCE** button on the steering wheel.
- 2 Press the **DISC/AUX** or **AUX** button until the Music Box™ mode displays on vehicle's Information Display Screen.

Missing Song Information:

If the track, artist and album information is not displayed while using the Music Box™, they may be available through an update. Visit www.InfinitiUSA.com/music-update for complete instructions.

INTERFACE SYSTEM FOR IPOD®

(if so equipped)

Connect the cable that is supplied with your iPod® to the **USB** jack, and then attach the other end of the cable to your iPod®. If compatible, the battery of your iPod® will charge during the connection to the vehicle.



The interface for iPod® operation shown on the vehicle's display screen is similar to the iPod® interface. The iPod® can only be operated by the vehicle audio controls while connected.

- 1 Connect the vehicle side of the cable to the vehicle connector in the center console first.
- 2 Connect the other end of the cable to your iPod®. The INFINITI logo and "Ok to disconnect" will display on the iPod® screen when the connection is active.
- 3 Use the INFINITI Controller to customize your playlist from the iPod® mode menu shown on the Information Display screen. Choose from menu items such as Playlists, Podcasts, Songs, Albums, Artists, Genres, Composers and Audiobooks. Select your selection and press **ENTER**.

Notes:

- The iPod® can be operated only through the vehicle audio system and steering wheel controls while the iPod® is connected to the vehicle.
- If the audio system is turned OFF while the iPod® is playing, push the **VOL (Volume) ON•OFF** knob to restart iPod® operation.

DVD-VIDEO PLAYBACK (for vehicles with INFINITI Navigation system)

(if so equipped)

DVDs can be loaded into and played through the CD/DVD slot on the vehicle's audio system. Insert a disc with the label-side facing up.

- Press the **DISC•AUX** button on the instrument panel and turn the display to the DVD mode. When a DVD is loaded, it will be replayed automatically.
- To view movies on the vehicle's Information Display Screen, the transmission must be in **P(PARK)** with the parking brake applied and the ignition switch in the **ACC** or **ON** position.

BLUETOOTH® STREAMING AUDIO (for vehicles with INFINITI Navigation system)

Your INFINITI is equipped with Bluetooth® Streaming Audio. If you have a compatible Bluetooth® device with streaming audio you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system. This connection allows you to listen to the audio from the Bluetooth® device using your vehicle speakers.

Connecting Procedure



- 1 Push the **SETTING** button and select the "Bluetooth" key.
- 2 Select the "Connect Bluetooth" key.
- 3 A confirmation screen will be displayed. Select "No."
- 4 Choose a PIN code and select the "OK" key.
- 5 The standby message screen will appear. Enter the PIN code into the Bluetooth® audio device. When the connecting is completed, the screen will return to the Bluetooth® setup display.

BLUETOOTH® HANDS-FREE PHONE SYSTEM WITH NAVIGATION

(if so equipped)


With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth® wireless technology, a touch-screen and voice recognition to provide hands-free cellular phone communication.

System Operation Tips

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the “Would you like to access Phone, Navigation, Information, Audio or Help?” prompt and the listening tone before speaking.
- Begin speaking a command within 1.5 seconds of the listening tone.
- To cancel a voice recognition session, press and hold the  button for 2 seconds.
- To increase or decrease the volume of the voice prompts, push the + or – (volume) control switch on the steering wheel or turn the **VOL** (volume) knob on the audio system while the system is responding.
- Speak in a clear and natural voice without pausing between words.
- The “Help” command will bring up the voice recognition command list.
- Please refer to the cellular phone manufacturer’s Owner’s Manual for detailed information regarding your Bluetooth® phone.
- For recommended phones and detailed instructions, please visit www.Infinitiusa.com/bluetooth.


Connecting Your Phone

Before using the hands-free feature, you need to set up, or connect, the system to recognize your compatible cellular phone(s). Five compatible Bluetooth®-enabled phones can be connected. After setup, the system automatically connects with a connected phone when the ignition is in the **ACC** or **ON** position, as long as the phone is on and in the vehicle.

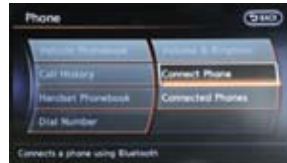

Connecting Procedure

NOTE: The vehicle must be stationary when connecting the phone.


- 1 Press the **PHONE** button or the  button.
- 2 Select the “Connect Phone” key and a pop up box will appear.
- 3 Read the information and select “Yes.”
- 4 Initiate connecting from the phone.
 - The connecting procedure for cellular phones varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.Infinitiusa.com/bluetooth.
 - The PIN code will appear on the screen (1234 is the default).
- 5 When connecting is complete, the screen will return to the Bluetooth® screen.

Setting Up Your Phonebook - Adding New Entries

Up to 40 phone numbers can be stored in the phonebook.

NOTE: The vehicle must be stationary when adding new entries.


- 1 Press the **PHONE** button and select the “Vehicle Phonebook” key.
- 2 Select the “Add New” key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - “Copy from Call History” to save a number from the Outgoing, Incoming or Missed Calls lists.
 - “Copy from the Handset” to save a number that has been downloaded from your handset to the vehicle.
 - “Enter Number by Keypad” to input the number and name manually.

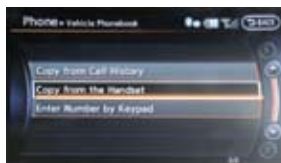


Many phones will support an automatic download of the cellular phone's phonebook. This process may take up to 5 minutes depending on the size of your phonebook. Once the phonebook is downloaded, selecting “Handset Phonebook” will allow you to access your downloaded phonebook (up to 1,000 entries) instead of using the “Vehicle Phonebook” key.




Making a Phone Call

To make a call, follow the procedures below:

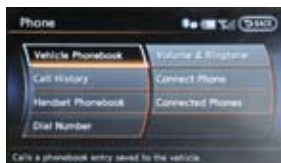- 1 Press the **PHONE** button or the  button on the steering wheel. The “Phone” screen will appear on the display.
- 2 Select “Vehicle Phonebook,” “Call History” or “Handset Phonebook.”
- 3 Select the registered person's name from the list. Dialing will start.



Receiving/Ending a Phone Call

- There are no voice commands for receiving or ending a phone call.
- To accept the call, press the  button on the steering wheel or select the “Answer” key. To reject the call, select the “Reject Call” key. To hang-up, press the  button or select the “Hang-Up” key.
- Pressing the  button during a connected phone call will allow you to send digits and special characters. After speaking the desired digits, press the **ENTER** button to send the recognized information.



How To Say Numbers

The system provides two commands for entering and dialing a phone number: “DIAL” and “INTERNATIONAL CALL.” The “DIAL” command is used for domestic phone numbers up to 10-digits in length, starting with the area code. The “INTERNATIONAL CALL” command is used when more than 10-digits need to be dialed or when special characters are required, such as: *, # or +. When using these two commands, please follow the phone digit speaking rules below:

- Only single digits 0 (zero) to 9 (nine) can be spoken.

- When saying the phone number 800-662-6200, the system will accept “eight hundred” in addition to “eight zero zero” or “eight oh oh.” 500, 700 and 900 are also supported.
- The long-distance calling prefix “1” is not required when making a call.

“Dial” Command Only

- You can say all the digits of a 7- or 10-digit phone number at one time.
- For a 10-digit number, saying the phone number in groups of 3, 3 and 4 digits may improve recognition for some speakers. To use this group dialing method, say only the first 3 digits of the phone number. After the system recognizes the number, it will request the next 3 digits and finally the last 4 digits.
- If a phone number is incorrectly recognized, you can try entering the phone number again using the 3-3-4 group dialing procedure by saying, “Change Number.”

“International Call” Command Only

 

- You can say the entire phone number at once or in groups of any digit length.
- For *, # and +, say “Star,” “Pound” or “Plus,” respectively.

BLUETOOTH® HANDS-FREE PHONE SYSTEM WITHOUT NAVIGATION

(if so equipped)

With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

System Operating Tips

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- To go back to the previous command, say “Go back” or “Correction.”
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit,” or press the  button.
- To increase or decrease the volume of the voice prompts, push the **VOL** (volume) control switch **+** or **-** on the steering wheel or turn the **POWER/VOLUME** knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The “Help” command can be used in any menu to hear a list of available commands.
- Please refer to the cellular phone manufacturer’s Owner’s Manual for detailed information regarding your Bluetooth® phone.
- For recommended phones and detailed instructions, please visit www.Infinitiusa.com/bluetooth.


Connecting Your Phone

To use the hands-free feature, you need to set up, or connect, the system to recognize your cellular phone(s). Five compatible Bluetooth®-enabled phones can be connected. After setup, the system automatically connects with a connected phone when the ignition is in the ACC or ON position, as long as the phone is on and in the vehicle.


NOTE: Some cellular phones require the user to enable the automatic reconnection feature. Please refer to the cellular phone manufacturer's Owner's Manual for Bluetooth® setup information.

Connecting Procedure

NOTE: The vehicle must be stationary when connecting the phone.




- 1 Press the  button on the steering wheel. The system announces the available commands.
- 2 Say "Connect Phone."
- 3 The system acknowledges the previous command and announces the next set of available commands. Say "Add phone."
- 4 Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.Infinitiusa.com/bluetooth.
 - The PIN code will appear on the screen (1234 is the default).
- 5 Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

Making a Phone Call

- 1 Press the  button.
- 2 After the tone, do one of the following:
 - Say "Call." After the system responds, say the name of the person in the phonebook.
 - Say "Call Phone Number." After waiting for the tone, say [number]. For example, say "Call Phone Number." After waiting for the tone, say "123-456-7891."
 - Say "Redial" to redial the previous phone number.
 - Say "Call Phone Number." After the system responds, say "Special Number" to dial more than 10 digits or special characters.
 - You can say all the digits of a 7- or 10-digit phone number at one time.
 - For a 10-digit number, saying the phone number in groups of 3, 3 and 4 digits may improve recognition for some speakers. To use this group dialing method, say only the first 3 digits of the phone number. After the system recognizes the number, it will request the next 3 digits and finally the last 4 digits.
 - If a phone number is incorrectly recognized, you can try entering the phone number again using the 3-3-4 group dialing procedure by saying "Correction."
 - When you have finished speaking the phone number wait for the system to repeat it back to you, then say "Dial."

Receiving/Ending a Phone Call

When you receive a phone call, a ring tone sounds through the audio system.

- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.


How To Say Numbers

INFINITI voice recognition permits numbers to be spoken in a variety of ways.

- Say “zero” or “oh” for “0.” Example: 1-800-662-6200 – Say “one eight zero zero six six two six two oh oh.”
- Say “pound” for “#.” Say “star” for “*” (available when using the “Call Phone Number” then “Special Number” command and the “Send” command during a call).
- Say “plus” for “+” (available only when using the “Call Phone Number” then “Special Number” command).
- Say “pause” for a 2-second pause.


Using Your Phonebook

When a compatible phone is connected to the system, the phonebook is automatically downloaded. This allows you to access your phonebook from the Bluetooth® system to call contacts by name. Up to 1,000 phone numbers will be transferred. To access your phonebook:

- 1 Press the  button and wait for the tone.
- 2 Say “Phonebook.”
- 3 Wait for the tone, then say [a name] or say “List names.” The name must be said exactly as it is entered in your phonebook for the system to recognize it. For example, say “Phonebook” then after the system responds, say “Michelle.”

The phonebook can transfer multiple numbers for each entry. If you select a name with multiple numbers, the system will ask you which number you want to dial.

The system allows for up to 40 voice tags to be recorded. You can record a voice tag for phonebook entries that the system has difficulty recognizing or to directly dial an entry with multiple numbers. To record a voice tag:

- 1 Press the  button and wait for the tone.
- 2 Say “Phonebook.”
- 3 Wait for the tone, then say [a name] or say “List names.” Select the name for which you want to record a voice tag.
- 4 Say “Record Name.”



INFINITI NAVIGATION SYSTEM

(if so equipped)

Refer to the 2010 INFINITI Navigation System Owner's Manual for complete Navigation system operation instructions.

- 1 **Control Panel Display Screen** – Displays navigation features and map.
- 2 **DEST (Destination) Button** – Press the **DEST** button to display the address book and alternative ways of programming a destination.
- 3 **MAP Button** – Press the **MAP** button to display the current location map screen.
- 4 **ROUTE Button** – Press the **ROUTE** button to display various ways to modify the route to a destination.
- 5 **DAY•NIGHT/OFF/Brightness Button** – Press the **DAY•NIGHT/OFF** button to switch between the day screen (bright) and the night screen (dark). Within 10 seconds of pressing the **DAY•NIGHT/OFF** button, you can adjust the brightness of the map display screen by pressing the directional buttons.
- 6 **SETTING Button** – Press the **SETTING** button to change or set navigation preferences.
- 7 **ENTER Button** – Press to select menu items highlighted on the vehicle's Information Display Screen.
- 8 **Center Dial** – Rotate the dial to navigate **UP**, **DOWN**, and **ACROSS** the vehicle's Information Display Screen.
- 9 **Main Directional Buttons** – Press to navigate **UP**, **DOWN**, and **ACROSS** the vehicle's Information Display Screen.
- 10 **Additional Directional Buttons** – Depending on which Map is displayed (2D or Birdview®), use these buttons to make “fine tuned” movements around the vehicle's Information Display Screen.
- 11 **BACK Key/Button** – Select the “Back” key to return to the previous function shown on the navigation display or press the **BACK** button.
- 12 **VOICE Button** – Press the **VOICE** button to hear the current navigation situation.
- 13 **ZOOM OUT Button** – Increases the scale of the map display.
- 14 **ZOOM IN Button** – Decreases the scale of the map display.
- 15 **INFO Button** – Press the **INFO** button to set or view various information that is helpful for using the vehicle safely and comfortably.

DEST

MAP

ROUTE

DAY•NIGHT/OFF

SETTING

ENTER

BACK

VOICE

ZOOM OUT

ZOOM IN

INFO

navigation

GETTING STARTED

DRIVING CONTROLS

COMFORT

MEDIA CENTER

NAVIGATION

CONVENIENCE

SWITCHING THE MAP VIEW

- 1 Press the **MAP** button. The current location map screen is displayed.
- 2 Select the “Map Menu” key.
- 3 Select the “Map View” key.
- 4 Select the “Change View” key.
- 5 Select either one of the “2D” keys or one of the “Birdview” keys to select the map view. Press the **MAP** button or select the “Back” key to accept the changes.



STORING YOUR HOME (AND OTHER ADDRESSES) IN YOUR ADDRESS BOOK


- 1 Press the **DEST** button.
- 2 Select the “Home (Add New)” key. If you have already stored your home this key may not appear.
- 3 When you select the “Home (Add New)” key, a confirmation message is displayed. Select the “Yes” key.
- 4 Select the “Street Address” key. A character input screen is displayed.
- 5 Enter the street number of your home, then select the “OK” key.
- 6 Enter your street name, select the “List” key. Select a destination from the displayed list. The map screen is displayed.
- 7 Your home location is displayed at the center of the map. Press the **ENTER** button to confirm the location on the map.
- 8 A confirmation message is displayed, and the system sets your home as the destination. Select the “OK” key.
- 9 Press the **MAP** button to return to the current location map screen.



STORE CURRENT LOCATION

You can store the current physical location of your vehicle in your Address Book.

- 1 While the map screen is displayed, Press **ENTER**.
- 2 Highlight **Store Location**, then press **ENTER**. A confirmation message will appear, confirming that the location has been stored to your Address Book. The location will be stored in the first available position in your Address Book and an icon representing the stored location is displayed in the map.

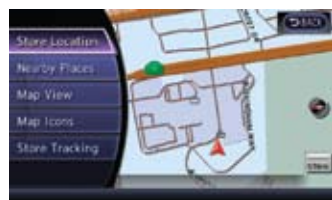

- 3 Press the **MAP** button or select the “Back” key to return to the Map screen.

SETTING A STREET ADDRESS AS A DESTINATION

- 1 Press the **DEST** button.
- 2 Select the “Street Address” key. A character input screen is displayed.
- 3 Enter the house number; when finished select the “OK” key. If you do not know the house number, select the “No House #” key.
- 4 Enter the name of the street. After finishing the entry, select the “List” key. A list of possible street addresses is displayed.
- 5 Select the correct address of the destination from the list. You might need to select the “Up” or “Down” key to find the preferred street address key.
- 6 The selected destination will be briefly displayed before showing the entire route. Select the “Start” key after confirming the displayed route is acceptable. The voice guidance will begin shortly.




MOVING AROUND WITHIN A MAP

You can manually move across the map to view the surrounding area or to view a preferred location.

- 1 Touch the screen in the direction that you want to move across the map. Once you begin moving on the map, the cross pointer appears.
- 2 Press the **MAP** button or select the “Back” key to return to the current location map screen. The cross pointer disappears.

SETTING A PLACE AS A DESTINATION

- 1 Press the **DEST** button.
- 2 Select the “Places” key.
- 3 Select the preferred nearby category from the list.

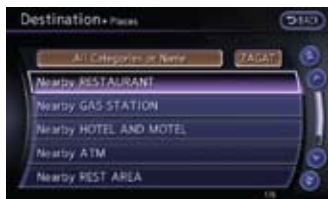

navigation

- 4 Select the preferred destination from the list. The position of the selected location is displayed on the right side of the screen.

NOTE: A maximum of 100 facilities can be displayed on the list screen. If the suggested route is already set, by selecting the "Show Along Route" key, the system displays only the facilities located along the route.

- 5 The selected destination will be briefly displayed before showing the entire route. Select the "Start" key after confirming the displayed route is acceptable. The voice guidance will begin shortly.



ZAGAT® RESTAURANT GUIDE

ZAGAT® Restaurant Guide allows you to search restaurants registered in the ZAGAT® database. The restaurants can be sorted by rating regarding food, decor, cost, service, etc. To search using ZAGAT®:

- 1 Press the **DEST** button.
- 2 Select the "Places" key.
- 3 Select the "Zagat" key.
- 4 Select the desired state. Change the region before step 2 if needed.
- 5 Select a neighborhood closest to your preferred destination.
- 6 Select a restaurant to narrow down the cuisine type or select the "Choose name" key.
- 7 Select an order to sort the list.
- 8 Select a restaurant from the list.
- 9 After confirming the route, select the "Start" key to begin the route guidance.



XM NavWEATHER® INFORMATION

An XM® satellite radio subscription with XM NavWeather® has to be activated in order for your vehicle to access XM NavWeather® Information.

INFINITI VOICE RECOGNITION SYSTEM

(for vehicles with the INFINITI Navigation system)

The voice recognition system allows hands-free operation of certain vehicle functions using voice commands. Available commands are announced by the system and shown on the vehicle's Information Display Screen. Simply follow the instructional prompts given by the system to complete the desired operation.

INFINITI VOICE RECOGNITION DOES NOT FUNCTION UNLESS THE CONVERTIBLE TOP IS COMPLETELY CLOSED.


In **Standard Mode** (the default setting), the following systems can be operated using Voice Recognition commands:

- Phone
- Navigation
- Information
- Audio
- Help



When the **Alternate Command Mode** is activated, advanced operation and an expanded list of commands are available. Refer to "**Alternate Command Mode**" later in this section for more information about this feature.

To Operate the Voice Recognition System:

- 1 Press the **TALK** button  located on the steering wheel. The system will respond, "**Would you like to access Phone, Navigation, Information, Audio or Help?**" and the vehicle's Information Display Screen will change to a list of available commands to speak.
- 2 After the tone, say one of the command choices. The system will then proceed to the next step. Continue listening to the prompts and responding with the requested information until the operation is completed.

If you want to repeat a step or if the system incorrectly recognized your command, press the BACK button on the steering wheel or on the INFINITI Controller.

If the system does not recognize your command, repeat the command. Avoid talking extremely loud or slowly; the system may not recognize the command.

System Operating Tips

- The interior of the vehicle should be as quiet as possible. Close the windows to eliminate the surrounding noises.
- Wait until the tone sounds before speaking a command.
- Speak in a natural conversational voice with minimal pauses between words.
- To give commands quickly, press the switch to interrupt the voice guidance.
- When speaking an address or a phone number to dial, it is possible to transfer from voice recognition to the button control by pressing the "Manual Controls" key on the screen when it is displayed.

SPEAKING PHONE NUMBERS

The system provides two commands for entering and dialing a phone number: “DIAL” and “INTERNATIONAL CALL.” The “DIAL” command is used for domestic phone numbers up to 10 digits in length starting with the area code. The “INTERNATIONAL CALL” command is used when more than 10 digits need to be dialed or when special characters are required such as *, #, or +. When using these two commands, please follow the phone digit speaking rules below:

- Only single digits 0 (zero) to 9 (nine) can be spoken.
- Speak digits at a normal pace. Speaking too slowly reduces recognition accuracy.
- When saying the phone number 800-662-6200, the system will accept “eight zero zero” or “eight oh oh.” 500, 700, and 900 are also supported. The 3-3-4 digit grouping is recommended for improved recognition.
- The long-distance dialing prefix “1” is not required when making a call.
- For *, # and +, say “**Star**,” “**Pound**,” or “**Plus**,” respectively.

VOICE RECOGNITION USER GUIDE


A simplified User Guide containing basic instructions for using the Voice Recognition system is available for reference.

- 1 Press the **INFO** button.
- 2 Highlight **Others**, then press **ENTER**.
- 3 Highlight **Voice Recognition**, then press **ENTER**.
- 4 Highlight **User Guide**, then press **ENTER**.
- 5 Highlight the desired topic, then press **ENTER**. The tutorial will begin.






VOICE COMMAND USAGE – PHONE SYSTEM

Making a Phone Call

- 1 Press the **TALK** button  on the steering wheel. The system will respond, “Would you like to access **Phone**, **Navigation**, **Information**, **Audio** or **Help**?” and the vehicle’s Information Display Screen will change to a list of available commands to speak.
- 2 After the tone, say “**Phone**.” The system will display the available phone commands and say “Please say **Dial Number**, **Vehicle Phonebook**, **Handset Phonebook**, **Call History** or **International Call**.”
- 3 After the tone, do one of the following:
 - Say “**Dial Number**” to dial a 7- or 10-digit phone number only. Follow the prompts to begin saying the phone number, starting with the area code. After the phone number has been recognized, say “**Dial**.” If incorrect, say “**Change Number**.”
 - Say “**Vehicle Phonebook**” to say a number from the displayed list or the voice tag of one of up to 40 phone numbers you have stored in the vehicle.
 - Say “**Handset Phonebook**” to say the name of one of up to 1,000 contacts downloaded from your phone handset. (Note: The order of contact information (first name, last name) transferred depends on the phone manufacturer. The name must be spoken as shown in the Handset Phonebook list.)
 - Say “**International Call**” to dial a phone number that has more than 10 digits.




Receiving a Phone Call

- There are no voice commands for receiving or ending a phone call.
- To accept the call, push the  switch on the steering wheel or select the “Answer” key on the display. To reject the call, touch the “Reject Call” key. To hang-up, push the  switch or select the “Hang-Up” key.
- Pushing the  switch during a connected phone call will allow you to send digits and special characters. After speaking the desired digits, press the ENTER button to send the recognized information.



VOICE COMMAND USAGE – NAVIGATION SYSTEM

Programming a Destination – Street Address


- 1 Press the TALK button  on the steering wheel. The system will respond, “Would you like to access Phone, Navigation, Information, Audio or Help?” and the vehicle’s Information Display Screen will change to a list of available commands to speak.
- 2 After the tone, say “Navigation.” The system will respond, “Please say Home, Address, Places, Address Book or Previous Destinations.”
- 3 After the tone, say “Address.”
- 4 The system will prompt you for additional information, such as the name of the state, city, street and house number. Follow the prompts to complete the desired operation.



Notes:

- To improve accuracy of street names, say the entire street name including Boulevard, Way, North, South, Road, etc.
- If you do not know the house number when asked, say “No House Number,” and the system will route you to a default location on the street.
- If a list of choices appears, please say the number from the displayed list.

ALTERNATE COMMAND MODE

For advanced operation, you can change to an Alternate Command Mode that expands the available list of commands. When this mode is active, all the Phone, Navigation, Information, Audio and Help commands can also be spoken after pushing the  switch without first having to say the type of command (e.g., Phone).



To Turn ON Alternate Command Mode:

- 1 Press the **SETTING** button.
- 2 Select the “Others” Key.
- 3 Select the “Voice Recognition” Key.
- 4 Select the “Alternate Command Mode” Key.


When the Alternate Command Mode is **ON**, perform the Speaker Adaptation procedure to train the system to your voice. Refer to the 2010 INFINITI Navigation System Owner’s Manual for detailed information on Speaker Adaptation and use of the Alternate Command Mode.

AUTOMATIC DRIVE POSITIONER MEMORY SYSTEM – DRIVER’S SEAT, STEERING & OUTSIDE MIRRORS (if so equipped)

When programmed, the Automatic Drive Positioner can adjust the driver’s seat, steering column and outside mirrors to two memorized positions.



To Set Customized Seat, Steering and Mirror Position Memory:

- 1 Push the ignition switch to the **ON** position. Keep the transmission in **P (PARK)** for vehicles with **Automatic** transmission and in **N (NEUTRAL)** with the parking brake applied for vehicles with **Manual** transmission.
- 2 Adjust the driver’s seat, steering wheel and outside mirrors to the desired positions.
- 3 Press the **SET** button. The indicator lights on both **Memory** buttons **1** and **2** will illuminate.
- 4 **Within 5 seconds**, press **Memory** button **1** or **2** and hold down for at least 1 second. The indicator light on the **Memory** button you select will illuminate solid for approximately 5 seconds. Seat/steering/mirror memory is now set to your preference.
- 5 Link the seat/steering/mirror memory to your INFINITI Intelligent Key™. While the indicator light on the **Memory** button is illuminated (see step 4, above), press the **UNLOCK**  button on your Intelligent Key. The indicator light on the **Memory** button chosen will blink **ON** and **OFF** approximately 10 times. The memory is now matched to the Intelligent Key. You may set the second seat/steering/mirror memory positions to your other Intelligent Key by repeating the steps above.

Note: After step 5 is performed one time to link the seat/steering/mirror memory to your Intelligent Key, you DO NOT need to perform this step again if new seat/steering/mirror memory positions are saved in the future. New memory positions are automatically linked to your Intelligent Key after step 5 is performed one time.

SEAT SYNCHRONIZATION FUNCTION

When the driver's seat is moved to a new position using the power seat controls, the steering column and outside mirrors will automatically adjust (if enabled) along with the seat position.

To Turn ON/OFF Seat Synchronization:

Hold down the **SET** button down for more than 10 seconds with the ignition switch in the **ACC** position. The indicator light on the Memory buttons will blink twice to indicate **ON**, and once to indicate **OFF**.

For Automatic Transmission models:

The transmission selector lever must be in the **P (Park)** position with the ignition switch in the **ACC** position.

For Manual Transmission models:

The parking brake must be applied with the ignition switch in the **ACC** position.

Notes:

- Synchronization of the steering column and mirrors is set to **OFF** as the **DEFAULT** position in your vehicle at time of delivery.
- If the outside mirrors or the steering wheel reaches its operating limit of range, seat synchronization will suspend operation. To restore operation:
 - adjust the steering wheel and outside mirrors manually to the desired positions and then drive the vehicle above 4 MPH, or,
 - press a Memory button (if programmed).

Note: The indicator light on a programmed memory button will illuminate after 5 seconds and then go off. Continue holding the **SET** button for more than 10 seconds to turn Seat Synchronization **ON** or **OFF**.

TRUNK RELEASE POWER CANCEL (ON/OFF) SWITCH

A **CANCEL (ON/OFF)** switch is located inside the glove box. If you cannot open the trunk using the Trunk-Release switch or Trunk-Release buttons, check the **CANCEL (ON/OFF)** switch.



For Vehicle Valet Hand-Off


- 1 Push the **OFF** side of the **CANCEL (ON/OFF)** switch.
- 2 Remove the Mechanical Key from the INFINITI Intelligent Key™ and use it to lock the glove box.
- 3 Hand the Intelligent Key to the valet. Keep the Mechanical Key with you.
- 4 When you retrieve your vehicle and Intelligent Key from the valet, unlock the glove box with the Mechanical Key and push the **ON** side of the **CANCEL (ON/OFF)** switch. Reinsert the Mechanical Key into the Intelligent Key.

OPENING/CLOSING THE HARDTOP (CONVERTIBLE)

Note:

- The hardtop can **ONLY** be operated when the trunk area is **EMPTY** and the separator partition is in the upright position and secured in its holders.
- **AVOID** stopping the retractable hard top **OPEN/CLOSE** operation mid-way through the process. If left in the mid-position, the hard top may creep to its fully retracted position potentially causing roof damage.

- 1 Pull up on the strap to open the trunk room partition.
- 2 Secure the partition hooks into holders until they latch. If the trunk room partition hooks are not latched in the holders, the hardtop **cannot** be operated and the “**CHECK SEPARATOR**” indicator will illuminate on the dot-matrix display screen located between the tachometer and speedometer.

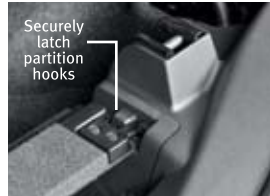

- 3 **Make sure** that no cargo is placed in the trunk area.



- 4 Securely close the trunk before operating the hardtop.

Note: The vehicle must be on a level surface when operating the hardtop.

To Open the Hardtop:

- 1 Move the selector lever to the **P (Park)** position (automatic transmission model) or move the shift lever to the **N (Neutral)** position (manual transmission model) and apply the parking brake.
- 2 Start the engine.
- 3 Press the hardtop operating switch to the **OPEN** side and **hold** until the top is fully open. The **ROOF OPEN** indicator will display when the hardtop is **OPEN** completely.



To Close the Hardtop:

- 1 Move the shift lever to the **P (Park)** position (automatic transmission model) or move the shift lever to the **N (Neutral)** position (manual transmission model) and apply the parking brake.
- 2 Start the engine.
- 3 Press the hardtop operating switch to the **CLOSE** side and **hold** until the top is fully closed. The **ROOF CLOSED** indicator will display when the hardtop is **CLOSED** completely.



Notes:

- If you release the switch and press it again while the top is being opened, the top will slightly move to the closing direction, and then start moving to the opening direction again.
- When the hardtop operating switch is pressed to **OPEN** or **CLOSE**, the driver's side and passenger side windows will automatically fully open. The windows do not rise automatically after the top opening or closing operation is completed. Pulling up and **holding** both front power window switches will raise both the front and rear windows.

OPENING THE HARDTOP USING THE DOOR HANDLE REQUEST SWITCHES

Press and hold either the driver's or passenger's side door Request Switch until the hardtop is open completely. This operation **cannot** close the hardtop.

Note: Requires the Intelligent Key to be on “your person,” within the operating range for the lock/unlock operation to function.

HARDTOP OPERATION INDICATORS

The conditions of the hardtop **OPEN/CLOSE** operation status will be indicated on the Information Display Screen (located between the tachometer and speedometer) while the hardtop is being operated.



ROOF IN OPERATION – This indicator is displayed while the hardtop is being operated.



ROOF OPEN – This indicator is displayed when the hardtop is **OPEN** completely.



ROOF CLOSED – This indicator is displayed when the hardtop is **CLOSED** completely.



CHECK SEPARATOR – This indicator is displayed when the trunk room partition is **NOT LATCHED** in the holders.




CHECK TRUNK – This indicator is displayed when the trunk is **NOT CLOSED** completely.

12-VOLT POWER OUTLET

(if so equipped)

A 12-volt power outlet is located within the center console. This outlet can be used for accessories that **do not exceed** a 12-volt, 120W (10A) power draw.

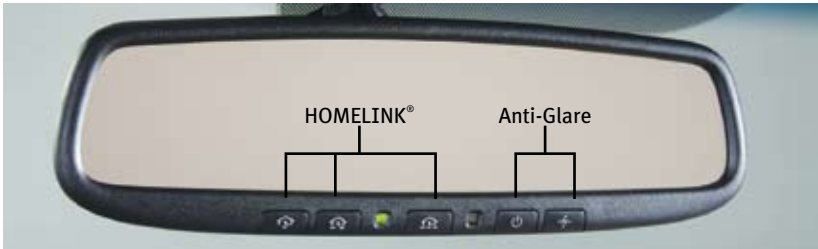

AUTO-DIMMING INSIDE MIRROR

(if so equipped)

The auto-dimming feature changes reflection depending on the headlight intensity of the vehicle behind you. This feature is automatically **ON** when the vehicle is started.

To Turn **ON/OFF** the Auto-Dimming Feature:

For Vehicles **with** the INFINITI Navigation System

Press the  button on the inside mirror to turn **OFF** the feature. Press the  button to turn the feature back **ON**.

For Vehicles **without** the INFINITI Navigation System

Press the  button on the inside mirror to turn **OFF** the feature. Press the  button to turn the feature back **ON**.

HOMELINK® UNIVERSAL TRANSCEIVER

(if so equipped)

This feature can memorize up to three unique signals to operate remote devices such as garage door openers. Refer to the programming information in your vehicle's owner manual for more details about this feature.



IMPORTANT CUSTOMER INFORMATION

ALUMINUM ALLOY WHEELS

Your vehicle is equipped with titanium finish alloy wheels that should be cleaned regularly with a sponge dampened in a mild soap solution specified for automotive applications, especially during winter months in areas where road salt is used. Salt could discolor the wheels if not removed. To help prevent damage to your high-end titanium finish alloy wheels:

- Do not use a cleaner that uses strong acid or alkali contents to clean the wheels.
- Do not apply wheel cleaner to the wheels when they are hot. The wheel temperature should be the same as the ambient temperature.
- Rinse the wheel to completely remove the cleaner within 15 minutes after the cleaner is applied.

MEMO

MEMO



INFINITI.

All illustrations, photographs and specifications in this guide are based on the latest product information; some vehicle parts cannot be shown in certain photographs. Some vehicles are shown with optional equipment. See actual vehicles for complete accuracy. Infiniti Division of Nissan North America, Inc. reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications and models, and to discontinue models or equipment. Availability and delivery time for particular models and equipment combinations may vary. For information on availability, additional options or accessories, contact your Infiniti dealer. All specifications, options and accessories shown in this guide apply to the 49 continental states. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. INFINITI, the Infiniti logo, and INFINITI model names are Nissan trademarks.