


# 2011 Infiniti QX

Quick Reference Guide



**INFINITI.**

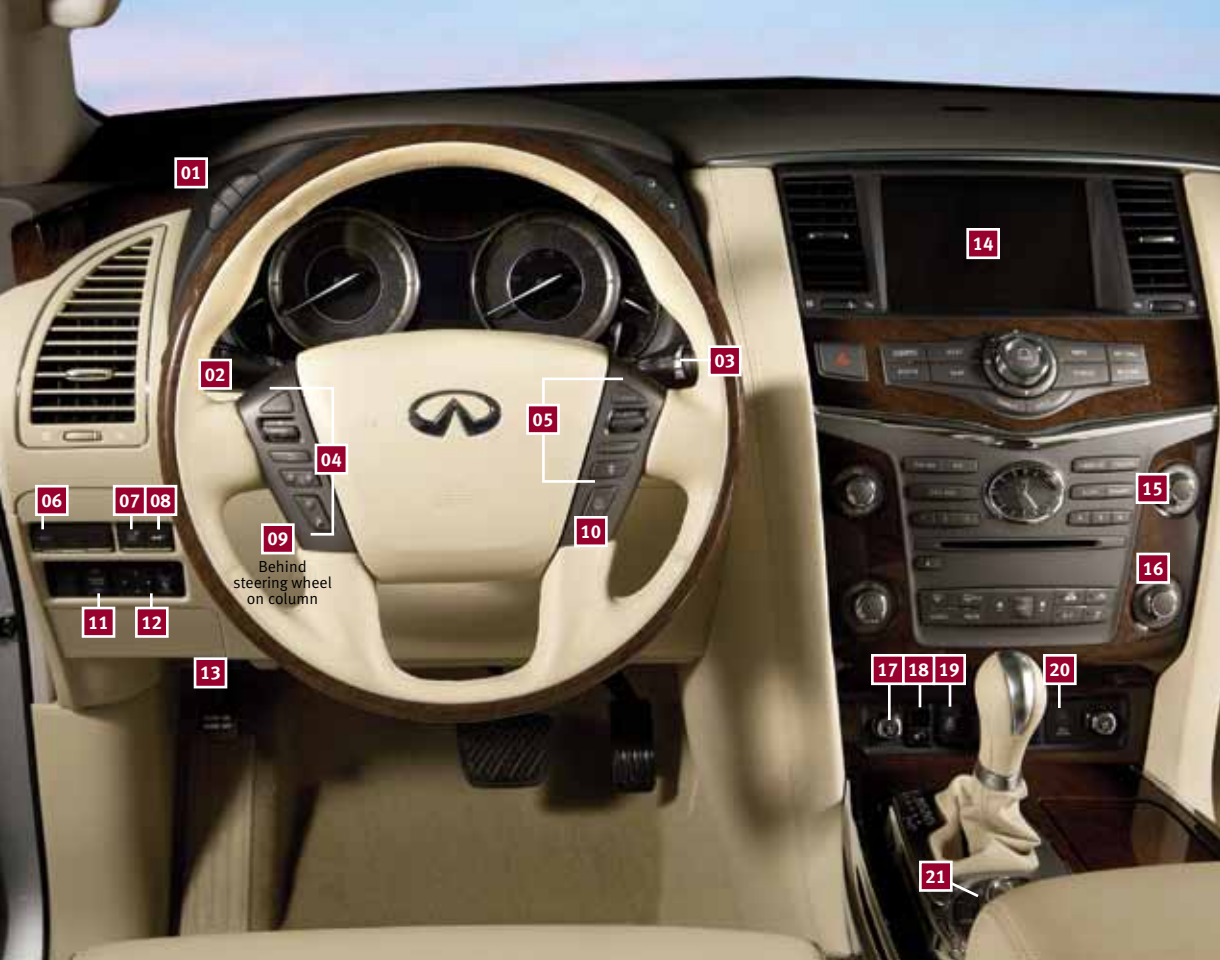

- 01** INSTRUMENT BRIGHTNESS CONTROL SWITCH\*
- 02** HEADLIGHT AND TURN SIGNAL SWITCH
- 03** WINDSHIELD WIPER AND WASHER SWITCH
- 04** STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH®
- 05** CRUISE CONTROL
- 06** ADAPTIVE FRONT LIGHTING SYSTEM (AFS) SWITCH\*
- 07** BLIND SPOT WARNING (BSW) SWITCH
- 08** POWER LIFT GATE SWITCH
- 09** TILT / TELESCOPIC STEERING WHEEL SWITCH\*
- 10** LANE DEPARTURE PREVENTION SWITCH\*
- 11** POWER LIFT GATE MAIN SWITCH
- 12** OUTSIDE MIRROR CONTROL SWITCH
- 13** HOOD RELEASE\*
- 14** CONTROL PANEL DISPLAY SCREEN\*
- 15** AUDIO SYSTEM
- 16** CLIMATE CONTROL SYSTEM
- 17** DRIVER'S CLIMATE CONTROLLED SEAT SWITCH\*
- 18** TIP-UP 2ND ROW SEAT SWITCH
- 19** HEATED STEERING WHEEL SWITCH\*
- 20** FRONT PASSENGER AIR BAG STATUS LIGHT\*
- 21** INFINITI DRIVE MODE SELECTOR\*

\*See your Owner's Manual for more information.

## new system features

Theater Package (if so equipped) . . . . .	2
Around View Monitor . . . . .	2
Blind Spot Warning (BSW) System (if so equipped) . . . . .	2
Tip-Up 2nd Row Seats (if so equipped) . . . . .	3
Adaptive Front Lighting System (AFS) (if so equipped) . . . . .	3
Lane Departure Prevention (LDP) System (if so equipped) . . . . .	3

## essential information

Loose Fuel Cap (if so equipped) . . . . .	4
Tire Pressure Monitoring System (TPMS) (if so equipped) . . . . .	4
Intelligent Cruise Control System (Full-Speed Range) (if so equipped) . . . . .	5
Resetting Outside Mirrors . . . . .	5

## first drive features

INFINITI Intelligent Key™ System . . . . .	6
Seat Adjustments . . . . .	6
Outside Mirror Control Switch . . . . .	6
Starting/Stopping the Engine . . . . .	7
Headlight Control Switch . . . . .	7
Windshield Wiper Switch . . . . .	7
Automatic Climate Controls . . . . .	8
FM/AM/XM® Radio with CD/DVD Player . . . . .	8
Parking Brake . . . . .	9
Power Lift Gate . . . . .	9
Fuel-Filler Door . . . . .	10

## system guide

Cruise Control . . . . .	11
Bluetooth® Hands-free Phone System . . . . .	11
Navigation System . . . . .	11
HomeLink® Universal Transceiver . . . . .	12



- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



Additional Information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at [www.InfinityUSA.com](http://www.InfinityUSA.com).

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner’s Manual. The Owner’s Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. INFINITI reserves the right to change specifications or design without notice and without obligation.

# new system features

## Theater Package (if so equipped)

- With this Entertainment System, you can play video files via a DVD or CD providing images and sound both from the front and rear display screens.
- You can also operate auxiliary devices such as video games, camcorders or portable video players through the auxiliary jacks.
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the remote controller, provided with the system, to operate the rear display screens.
- Use the headphones, also provided with the system, to listen to audio wirelessly and independently.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



## Around View Monitor

- The front sonar operates only with the Around View Monitor activated.
- When the CAMERA button is pressed and the vehicle speed is less than 6 mph (10 km/h) or the shift lever is moved to the R (REVERSE) position, the Information Display Screen will automatically change to view the area surrounding the vehicle.
- With the Around View Monitor displayed, the corner sonar system can detect objects near the vehicle and warn the driver by sounding a tone and showing an indicator in the display screen.



For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

## Blind Spot Warning (BSW) System (if so equipped)

- The Blind Spot Warning (BSW) system **01** alerts the driver when another vehicle moves into the vehicle's blind spot area.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



## Tip-Up 2nd Row Seats (if so equipped)

- Press the tip-up 2nd row seat switch **01**. The 2nd row seats will automatically fold down and tip forward for easy entry and exit from the 3rd row seat.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



## Adaptive Front Lighting System (AFS) (if so equipped)

- As you turn left or right, or drive along winding roads, the AFS system moves your low beams left or right, according to your vehicle’s steering pattern.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## Lane Departure Prevention (LDP) System (if so equipped)

- This system helps assist you to return the vehicle to the center direction of the traveling lane by applying brake control to the left or right wheels individually (for a short period of time).

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



## Loose Fuel Cap (if so equipped)

- A LOOSE FUEL CAP warning message will appear in the dot matrix liquid crystal display **01** when the fuel-filler cap is not tightened correctly.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustment (section 3)**” of your Owner’s Manual.



## Tire Pressure Monitoring System (TPMS) (if so equipped)

- A CHECK TIRE PRESSURE warning message will appear in the dot matrix liquid crystal display **01** and the TPMS light will illuminate when one or more tires are low on pressure and air is needed.
- When adding air to an under-inflated tire, the TPMS will provide a tire inflation indicator with audible and visual cues that indicate when the tire has reached the recommended COLD tire pressure.
- To use the tire inflation indicator:
  1. Move the shift lever to the P (PARK) position and apply the parking brake.
  2. Place the ignition switch in the ON position, but do not start the engine.
  3. Add air to the underinflated tire and within a few seconds, the hazard warning lights will flash.
  4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
  5. Repeat this procedure for any additional underinflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h) and the warning and indicator light will disappear.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in all four tires.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

## Intelligent Cruise Control System (Full-Speed Range) (if so equipped)

- The Intelligent Cruise Control (ICC) system automatically maintains a selected distance from the vehicle traveling in front of you according to that vehicle's speed (up to the set speed) or at the set speed when the road ahead is clear.
- This system may not function properly due to road conditions when direct sunlight, rain, mud, snow or other road spray cause the sensor to become blocked.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

## Resetting Outside Mirrors

- If mirrors are manually operated or bumped, the mirror body can become loose at the pivot point.
- To correct electronic mirror operation, cycle mirrors by pushing the outside rearview mirror folding switch to the **CLOSE** position until completely closed, then push the switch to the **OPEN** position until the mirror is completely open.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

# first drive features

## INFINITI Intelligent Key™ System

The INFINITI Intelligent Key™ system allows you to lock or unlock your vehicle, open your lift gate and start the engine.

- To lock or unlock the driver's or front passenger's door, push the door handle request switch **01** once.
- Push the door handle request switch **01** within 1 minute of unlocking the door and all other doors will unlock.

**NOTE:** It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



## Seat Adjustments

- Push the control switch **01** forward or backward to slide the seat forward or backward.
- Push the switch **02** forward or backward to adjust the angle of the seatback.

### SEAT LIFTER

- To raise or lower the front portion or height of the seat, push the front or rear end of the switch **01** up or down.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" section of your Owner's Manual.



## Outside Mirror Control Switch

- Move the control switch **01** right or left to select the right or left side mirror.
- Adjust each mirror to the desired position using the switch **02**.
- Push the switch **03** to the **CLOSE** position to fold the outside rearview mirrors and push the switch **03** to the **OPEN** position to unfold the outside rearview mirrors.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.





## Starting/Stopping the Engine

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.

NOTE: It is important to make sure the INFINITI Intelligent Key™ is with you (that is, in your pocket or purse).

### TURNING THE ENGINE OFF

- Move the shift lever to the P (PARK) position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

### EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:

- Rapidly push the push button ignition switch 3 consecutive times, or
- Push and hold the push button ignition switch for more than 2 seconds.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



## Headlight Control Switch

- Turn the headlight control switch **01** to the  $\text{D}\text{D}\text{E}$  position to turn on the front parking, side marker, tail, license plate and instrument lights.
- Turn the switch **01** to the  $\text{D}$  position to turn on the headlights.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## Windshield Wiper Switch

- Move the lever to the following positions to operate the windshield wipers:

**01** Mist (**MIST**) - One sweep operation of the wipers.

**02** Auto (**AUTO**) - Operates the rain-sensing auto wiper system.

**03** Low (**LO**) - Wipers operate at a continuous low-speed.

**04** High (**HI**) - Wipers operate at a continuous high-speed.

- When the windshield wipers are operated continuously, your headlights will turn on automatically.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



# first drive features

## Automatic Climate Controls



### 01 AUTO BUTTON/TEMPERATURE CONTROL DIAL

Press the **AUTO** button to turn the system on and the fan speed, air flow distribution and temperature will be automatically maintained. Turn the driver's side temperature control dial left for cold air or right for hot air.



### 02 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

Press the defroster control button  to turn the system on or off.

### 03 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

Push the rear window and outside mirror defroster switch  **REAR** to turn the system on or off.

### 04 FAN SPEED CONTROL BUTTONS

Press the fan speed control buttons to manually adjust the fan speed down  or up .

For more information, refer to the “**Instrument and controls (section 2)**” or the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

## FM/AM/XM<sup>®</sup>\* Radio With CD/DVD Player



### 01 ON/OFF VOLUME CONTROL DIAL

Press the **VOL** button to turn the system on or off. Turn the dial right or left to increase or decrease the volume.

### 02 TUNE/FOLDER/AUDIO CONTROL DIAL

To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** dial left or right.

\*XM<sup>®</sup> Satellite Radio is only available on vehicles equipped with optional XM<sup>®</sup> satellite subscription service.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

## Parking Brake

- To apply, firmly depress the parking brake pedal **01** .



- To release, firmly press the foot brake **02** , then press the parking brake pedal **01** and the parking brake will release.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



## Power Lift Gate

When the lift gate is closed, the lift gate will fully open automatically by:

- Pushing the power lift gate switch **01** on the instrument panel.



- Pushing the lift gate opener switch **02** .



- Pressing the power lift gate button **03** on the INFINITI Intelligent Key™ for more than one second.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



## Fuel-Filler Door

The fuel-filler door is located on the left, rear side of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- To open the door, once unlocked, push the right side of the door.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



## Cruise Control

- The cruise control system enables you to set a constant cruising speed.
- The system will maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.

For more information, refer to the **“Starting and driving (section 5)”** of your Owner’s Manual.



## Bluetooth® Hands-free Phone System

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.

For more information, refer to the **“Monitor, climate, audio, phone and voice recognition systems (section 4)”** of your Owner’s Manual or please visit [www.InfinitiUSA.com/bluetooth](http://www.InfinitiUSA.com/bluetooth).



## Navigation System



- Your Navigation system can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle’s position. If you have deviated from the original route, it will recalculate the route from your current location.
- The Navigation system can also provide you with important data, such as; distance to empty, your tire rotation schedule and other maintenance interval reminders.

For more information, please refer to your Navigation System Owner’s Manual.

## HomeLink® Universal Transceiver



- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as; garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.





**INFINITI.**

All illustrations, photographs and specifications in this guide are based on the latest product information; some vehicle parts cannot be shown in certain photographs. Some vehicles are shown with optional equipment. See actual vehicles for complete accuracy. Infiniti Division of Nissan North America, Inc. reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications and models, and to discontinue models or equipment. Availability and delivery time for particular models and equipment combinations may vary. For information on availability, additional options or accessories, contact your Infiniti dealer. All specifications, options and accessories shown in this guide apply to the 49 continental states. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. INFINITI, the Infiniti logo and INFINITI model names are Nissan trademarks.