# 2014 Infiniti Service and Maintenance Guide



### **VEHICLE IDENTIFICATION**

Vehicle Identification Number (VIN)	
Delivery Date	Warranty Start Date
Mileage at Delivery	Model Year
Selling Dealer	Selling Dealer Phone

# TABLE OF CONTENTS



<b>OWNER'S LITERATURE INFORMATION</b>
INTRODUCTION
Infiniti Maintenance
Why Infiniti Service?
Extended Service Products
Genuine Infiniti Collision Parts7
SCHEDULED MAINTENANCE GUIDE
Determining the Proper Maintenance Interval
Explanation of Scheduled Maintenance Items9
Maintenance Schedules
Optional Premium Maintenance Upgrade
HEV Li-ion Battery Replacement Record
Maintenance Log

# **OWNER'S LITERATURE INFORMATION**

#### INDEX OF TOPICS

Radio/CD/Heater/AC Operation	Owner's Manual: chapter 4
Starting and Driving Your Vehicle	Owner's Manual: chapter 5
Security System Operation	Owner's Manual: chapter 2
Changing a Flat Tire	Owner's Manual: chapter 6
New Vehicle Limited Warranty	"2014 New Vehicle Limited Warranty" section in Warranty Information Booklet
Federal Emission Control Warranties	<i>"Federal Vehicle Emission Control Limited Warranties" section in Warranty Information Booklet</i>
California Emission Control Warranties	"California Vehicle Emission Control Warranties" section in Warranty Informati on Booklet
Tire Pressure/Rotation	Owner's Manual: chapter 8
Tire Warranties/Safety Information	Individual tire manufacturer warranty sections in Warranty Information Booklet
Consumer Affairs Assistance	<i>"Nissan's Customer Care Program" section in Warranty Information Booklet</i>
	Customer Care/Lemon Law Information Booklet <sup>*</sup>
Do It Yourself Information	Owner's Manual: chapter 8
General Maintenance	Owner's Manual: chapter 8

WHERE TO FIND INFORMATION

### INFINITI MAINTENANCE



#### **Maintain Your Investment**

Preventative scheduled maintenance is an important investment to optimize the performance, durability, reliability, safety and resale value of your Infiniti. Scheduling your vehicle's maintenance at the recommended intervals will ensure your vehicle is running at its best. We want you to enjoy your Infiniti vehicle. This Service and Maintenance Guide is designed to help you make sure your vehicle receives proper and timely maintenance that is necessary. Key services are explained in detail, along with an outline of scheduled maintenance to help you maintain your vehicle. Your local Infiniti retailer can assist you in determining the best schedule based on your driving habits and local conditions.

Failure to perform scheduled maintenance may result in excluding portions of your vehicle from warranty coverage and may reduce the performance, durability, reliability, safety and/or resale value of your vehicle. See your Warranty Information Booklet and Owner's Manual for details.

### WHY INFINITI SERVICE?\*

To preserve the quality and safety of your vehicle, an authorized Infiniti retailer is recommended for maintenance or repair. Only an authorized Infiniti retailer offers you these advantages:

- Factory Trained and ASE certified technicians
- Immediate access to warranty service history and fac-۲ tory technical information
- Latest diagnostic, special tools and service techniques
- Genuine Infiniti Parts that meet Infiniti's demanding standards
- 12 month/12,000 mile parts and labor limited warranty when Genuine Infiniti Parts are installed by your retailer
- Complimentary Multi-Point Inspections (at participating retailers)
- Clear, up-front estimates
- Service Loan Car availability for scheduled warranty service.\*\*
- Shuttle service/Courtesy van (at participating retailers)



We recommend relying on our trained Infiniti service specialists, who refer to their detailed knowledge of your Infiniti in every service they perform. Plus, they use Genuine Infiniti Parts, designed and engineered specifically to maintain your Infiniti's original integrity. That's the distinction of your authorized Infiniti retailer.



Your Service - Your Way



<sup>\*</sup> May differ or not apply outside the United States, please inquire of your retailer. \*\* Available during Basic New Vehicle Limited Warranty at participating Infiniti retailers. Subject to availability. Restrictions apply.

### **EXTENDED SERVICE PRODUCTS**

Infiniti Elite Extended Protection Program\*

#### Long-Term Coverage

Infiniti Elite Extended Protection Plans provide with longterm coverage to 8 years/120,000 miles. Coverage under the optional Infiniti Elite Extended Protection Plan and the Infiniti Limited Warranty begins with the delivery of the vehicle to the first retail buyer. Accordingly, your agreement may provide coverage for your vehicle for a portion of the same period as your New Vehicle Warranty. Upon expiration of the applicable Limited Warranties, the full spectrum of the Infiniti Elite Extended Protection Plan coverage is in force to the end of the time or mileage term. During the period of your Basic Warranty, the Infiniti Elite Extended Protection Plan provides you with Rental Car Coverage only.



New Vehicle Limited Warranty

Elite Infiniti Extended Protection Plan (8 years/120,000 miles) benefits include:

mechanical breakdown protection

Roadside Assistance extended

car rental coverage

#### **Benefits You Can Count On**

# SERVICE AT AUTHORIZED INFINITI RETAILERS/REPAIR FACILITIES.

With the Infiniti Elite Extended Protection Plan, service is completed by Infiniti-trained technicians.

#### UNLIMITED CLAIMS.

No limit on the number of claims for covered repairs.

### EXTENDED SERVICE PRODUCTS

#### PROVIDES FOR THE COST OF GENUINE ORIGINAL EQUIP-MENT REPLACEMENT PARTS.

Designed for use on Infiniti vehicles. No inferior substitutes.

#### **EMERGENCY TOLL-FREE HELP.**

If a breakdown occurs outside your area, you are covered. Just contact the nearest Infiniti retailer, or call the special toll-free number for assistance.

#### SUBSTITUTE TRANSPORTATION.

If a mechanical breakdown occurs and you require alternate transportation, Infiniti will reimburse you for actual expenses up to \$50 per day, to a maximum of 5 days and \$250 per service visit.



#### TRANSFERABLE TO A NEW OWNER.

Should you sell your Infiniti before your coverage expires, you can transfer your Infiniti Elite Extended Protection Plan,\*\* thereby enhancing your vehicle's resale value.

#### CONVENIENT AND ECONOMICAL.

Coverage that costs only pennies per day. Your Infiniti retailer will be happy to include the cost in your monthly car payment.

<sup>\*\*</sup> A nominal transfer fee may apply. For details please refer to the Infiniti Elite Extended Protection Plan Vehicle Service Contract, or contact your Infiniti retailer.

### **GENUINE INFINITI COLLISION PARTS**

If you have an accident, insist on Genuine Infiniti Collision Parts. If you want your vehicle to be restored using parts made to Infiniti's original exacting specifications – if you want it to last, help to protect your personal safety and to help hold its resale value, the solution is simple. Tell your insurance agent and your repair shop to use only Genuine Infiniti Collision Parts.

Many non-genuine parts are copies made from impressions of Infiniti parts and may not match the specifications and performance standards of Genuine Infiniti Parts. As a result, non-genuine parts may not look or fit right, and may be less safe.

The hood on your vehicle is a good example. Infiniti designed it with hood buckling creases to help prevent the hood from penetrating the interior of your vehicle in an accident. Non-genuine parts may not provide such built-in safeguards.

In some states, the law says you must be advised if nongenuine parts are used to repair your vehicle. **Why should you take a chance?** 

#### Replacement Panel Limited Lifetime Corrosion Warranty\*

#### See your participating Infiniti retailer for details.

If you have your collision damage repaired using Genuine Infiniti Outer Sheet Metal Panels you don't have to worry about corrosion. That's because these panels are warranted against inside out rust-through perforation for as long as you own your Infiniti. Another reason to insist on Genuine Infiniti Collision Repair Parts.

\* This warranty does not apply to vehicles or parts, not distributed by Nissan North America and/or sold outside the United States.

### DETERMINING THE PROPER MAINTENANCE INTERVAL

# As a condition of your vehicle's warranty, you are responsible for properly maintaining your vehicle. In maintaining your vehicle, you should use these guidelines to determine which maintenance schedule to use.

Standard maintenance; features 5,000 mile or 6 month, whichever comes	Additional maintenance items for severe operating conditions; should be
first, service intervals and generally applies when you primarily operate your	performed on vehicles that are driven under especially demanding
vehicle on the highway in temperate conditions. Premium maintenance is an	conditions. Additional maintenance items should be performed if you pri-
Infiniti recommended optional upgrade that adds services when mainte-	marily operate your vehicle under the following conditions:
nance is performed.	• Repeated short trips of less than 5 miles in normal temperatures or less
<b>Premium Maintenance;</b> <sup>*</sup> performing the Premium upgrade services may opti-	than 10 miles in freezing temperatures.
mize the performance, durability, reliability, and resale value of your vehicle.	• Stop-and-go traffic in hot weather or low speed driving for long distances
(Premium Maintenance items are available at every 30,000 miles or	• Driving in dusty conditions or on rough, muddy, or salt-spread roads
36 months interval.)	<ul> <li>Towing a trailer, or using a camper or car-top carrier</li> </ul>

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>\*</sup> Premium Maintenance is an Infiniti-recommended option; You need not perform such maintenance in order to maintain the warranties which come with your Infiniti. Premium Maintenance may not be available outside the United States, please inquire of your dealer.

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti dealer. See page 16 for more information on Multi-Point Inspections.

### **EXPLANATION OF SCHEDULED MAINTENANCE ITEMS**

The following descriptions are provided to give you a better understanding of the scheduled maintenance items that should be regularly checked or replaced. The maintenance log indicates at which mileage/time intervals each item requires service.

In addition to scheduled maintenance, your Infiniti requires that some items be checked during normal day-to-day operation. You can find these items listed under "General Maintenance" in Chapter 8 of your Owner's manual.

Items marked with **"\*"** are recommended by Infiniti for reliable vehicle operation. You are not required to perform such maintenance in order to maintain the emission warranty or manufacturer recall liability. Other maintenance items and intervals are required. When applicable, additional information can be found in the "Do-ityourself" section in Chapter 8 of your Owner's Manual.

NOTE: Nissan North America does not advocate the use of non-OEM approved aftermarket flushing systems and strongly advises against performing these services on a Infinti product. Many of the aftermarket flushing systems use non- OEM approved chemicals or solvents, the use of which has not been validated by Nissan North America.

For recommended fuel, lubricants, fluids, grease, and refrigerant refer to Chapter 9 in your Owner's Manual.

#### Emission Control System Maintenance:

#### **Drive Belts\***

Check engine drive belts for wear, fraying or cracking and for proper tension. Replace any damaged drive belts.

#### **Engine Air Filter**

Replace at specified intervals. When driving for prolonged periods in dusty conditions, check/replace the filter more frequently.

#### **Engine Coolant\***

Replace engine coolant at the specified interval. The recommended service interval of the factory-fill coolant is 105,000 miles (168,000 km) or 7 years, whichever comes first. When adding or replacing coolant, be sure to use only Genuine Nissan Long Life Antifreeze/Coolant (Blue) or equivalent with the proper mixture. (Refer to the owner's manual to determine the proper mixture for your area). Subse-

### **EXPLANATION OF SCHEDULED MAINTENANCE ITEMS**)

quent replacement of Genuine Nissan Long Life Antifreeze/Coolant (Blue) should occur every 75,000 miles (120,000 km) or 5 years, whichever comes first. NOTE: Mixing any other type of coolant or the use of nondistilled water will reduce the recommended service interval of the coolant.

#### Hybrid Electronic Vehicle (HEV) Inverter Coolant

Replace inverter coolant at the specified interval. The recommended service interval of the factory-fill coolant is 125,000 miles (200,000 km) or 15 years, whichever comes first. Subsequent replacement of Genuine Nissan Long Life Antifreeze/Coolant (Blue) should occur everv 75,000 miles (120,000 km) or 5 years, whichever comes first. When adding or replacing coolant, be sure to use only Genuine Nissan Long Life Antifreeze/Coolant (Blue) or equivalent with the proper mixture. (Refer to

the Owner's Manual to determine the proper mixture for your area.)

NOTE: Mixing any other type of coolant or the use of non-distilled water will reduce the recommended service interval of the coolant.

#### **Engine Oil and Oil Filter**

Replace engine oil and oil filter at the specified intervals. For recommended oil grade and viscosity refer to Chapter 9 in your Owner's Manual.

#### **Engine Valve Clearance\***

Inspect only if valve noise increases. Adjust valve clearance if necessary.

# Evaporative Emissions Control Vapor Lines\*

Check vapor lines and connections for leaks or looseness. Tighten connections or replace parts as necessary.

#### **Fuel Filter**

Maintenance-free item (In-tank type filter).

#### Fuel Lines\*

Check the fuel hoses, piping and connections for leaks, looseness, or deterioration. Tighten connections or replace parts as necessary.

#### Spark Plugs

Replace at specified intervals. Replacement Intervals for IPL models differ from non-IPL models. Install new plugs of the same type as originally equipped.

#### **Chassis and Body Maintenance:**

#### Brake Lines and Cables

Visually inspect for proper installation. Check for chafing, cracks, deterioration, and signs of leaking. Replace any deteriorated or damaged parts immediately.

### **EXPLANATION OF SCHEDULED MAINTENANCE ITEMS**

#### Brake Light and Cruise Control Switches

Inspect the clearance between the brake pedal and the switches.

#### Brake Calipers, Pads, Rotors

Check for wear, deterioration and fluid leaks. Replace any deteriorated or damaged parts immediately.

#### **Exhaust System**

Visually inspect the exhaust pipes, muffler and hangers for leaks, cracks, deterioration, and damage. Tighten connections or replace parts as necessary.

#### **In-Cabin Microfilter**

Replace at specified intervals. When driving for prolonged periods in dusty conditions, replace the filter more frequently.

#### Propeller Shaft(s)

Check for damage, looseness, and grease leakage (4WD/AWD/RWD).

# **Steering Gear and Linkage, Axle and Suspension Parts, Drive Shaft Boots**

Check for damage, looseness, and leakage of oil or grease. Under severe driving conditions, inspect more frequently.

#### **Tire Rotation**

Tires should be rotated every 5,000 miles according to the instructions in the Owner's Manual (except Q60 Coupe Journey model with Sport Package, Q60 Coupe Sport 6MT, Q60 Coupe Journey models with Performance Tire & Wheel Package and all Q60 convertibles). When rotating tires, check for damage and uneven wear. Replace if necessary.

#### Transmission Fluid – Automatic or Manual, Differential Oil, Transfer Case Oil

Visually inspect for signs of leakage at specified intervals.

If towing a trailer, using a camper or car-top carrier, or driving on rough or muddy roads, replace the transmission fluid/oil at every:

- 20,000 miles or 24 months.
- 30,000 miles for QX60 Hybrid Electronic Vehicle (HEV).
- 60,000 miles for QX60 (except HEV) CVT fluid.
- 7-speed automatic transmission fluid if maintenance free.

# OFF-ROAD MAINTENANCE (QX80 ONLY)

Check the following items more frequently after driving off-road through deep sand, mud or water:

- Brake pads and rotors
- Brake lines and hoses
- Differential oil, transmission fluid, and transfer case oil
- Steering linkage
- Propeller shafts and drive shafts
- Engine air filter
- In-cabin microfilter

### **MAINTENANCE SCHEDULES**



The following Maintenance Schedule has been compiled by Infiniti to assist you in performing the recommended maintenance services and keeping appropriate records of services performed. Along with the related repair invoices, receipts, and other such records, a properly documented maintenance history could enhance the value of your vehicle should you ever wish to sell it. The services listed represent the minimal factory recommended requirements for each time/mileage interval, up to 120,000 miles / 144 months. Beginning on page 43 you will find a maintenance log that should be used to track when and where services were performed. Ask your Service Consultant to stamp and update your log each time your vehicle is serviced.

### COMPLIMENTARY MULTI-POINT INSPECTION\*

For the ultimate in preventative maintenance, ask your Service Consultant for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer.

MPI's are performed by Infiniti factory trained Technicians who will provide you with a detailed report of your vehicles condition.

Driving your Infiniti should be as worry-free an experience as possible. Trust your Infiniti retailer to inspect and maintain your vehicle so you can take pride in knowing your vehicle is ready for the road ahead.

\*Available at participating retailers

NOTE: Form shown is an example. Actual form may vary.

Olenti	Year/Model:	Date:
Väzager	vm	111111
Service Consultant:	Technician:	Work Order #:
OHECKED AND OK AF THIS TIME MAY HEED FUTURE ATTENTION	REQUIRES INMEDIATE ATTENTION	IN NOT INSPECTED AT THIS TIME
Interior / Anterior	BATTERY PERFORMANCE	WAR HASPECTED & THIS TWO
HORN OPERATION		LES / MOUNTING
	BATTERY CAPACITY TEST (TEST II	ESUUS ATTACHED)
COC LET WPER BLACE COC BOSHT WPER BLACE	1955 EDWARD C	MAL SPECTE
	COMMENTS:	HATCH!
COC IN-CABIN MICROFILTER	THES	
COMMENTS:	TREAD DEPTH	BIGHT FRONT
UNDER HOOD	TITLE OR CREATER	T/33 OR GREAT
COO INGRE OL	- 4/32 10 4/32	= 4/32 TO 6/32
COCUMIT	3/32 OR LESS     MOT INSPECTIO	<ul> <li>1/32 OF LESS</li> <li>NOT INSPECTED</li> </ul>
🗇 🗇 👄 POWER STEERING FLUID	PRESSURE	T PRESSURE
OOO BARE ILUD	OUTGOING THE	OUTGOING
	UPT HEAR	RIGHT REAR
C C AUTOMATIC TRANSMISSION FLID	T/32 OR GREATER	- 1/12 CR CREAT
COCCING SYSTEM HOSES	<ul> <li>4/32 T0 6/32</li> <li>THE ROTATIO</li> <li>3/32 OR LESS</li> </ul>	
HEATER / AC HOSES AND CONNECTIONS	I NOT INSPECTED	wor inspected
CONTRACTOR CORE AND CAP	PRESSURE	PRESSURE INCOMING
C C C C NGNI AN PUTH	OUTSOING	OUTGOING
C C C C C C C C C C C C C C C C C C C	COMMENTS:	
COMMENTS		
UNDER VEHICLE	BRAKE CONTREPORT	
CONTRACT SHOCKS / SUSPENSION		
CO CO REAR SUBPLIANE	CO CO INCHT FRONT BANKE PADS	
	COCO BIGHT REAR BRAKE PADS	-
COC DEVIC SHUT	COMMENTS & RECOMMENDATIONS:	
- MUITLER / EXHAUST / MOUNTINGS	-	
PRONT SHOCKS / SUSPENSION (CV BOOTS / TIE RODS / BUSHINGS)		
- ALLS - VISUAL INSPECTION FOR LEAKS		
- FLUID LEAKS (DL. / TRANSMISSION / COOLANT)		
OMMENTS:		

### 5,000 MILES OR 6 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
  - Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating 🔳 Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

### 10,000 MILES OR 12 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2</sup>
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - \_\_\_ CVT fluid
  - \_\_\_ Differential oil
  - Drive shaft boots (4WD/AWD)
  - Manual transmission oil
  - Propeller shaft (4WD/AWD/RWD)
  - Transfer case oil (4WD/AWD)

### Additional Maintenance Items for Severe Operating

- Replace brake fluid
- □ Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - \_\_\_ Exhaust system
  - ---- Front suspension ball joints
  - \_\_\_\_ Steering gear and linkage
  - \_\_\_\_ Steering linkage ball joints

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.

3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

### 15,000 MILES OR 18 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace in-cabin microfilter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

### 20,000 MILES OR 24 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace brake fluid
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
- Automatic transmission fluid<sup>2,3</sup>
- \_\_\_\_ Axle & suspension parts
- Brake lines & cables
- Brake calipers, pads, rotors
- Brake light & cruise control switches<sup>4</sup>
- \_\_\_\_ CVT fluid
- Differential oil<sup>2</sup>
- Drive shaft boots (4WD/ AWD)
- \_\_\_ Exhaust system

- Front suspension ball joints
- Fuel lines/connections
- Fuel tank vapor vent system hoses
- Manual transmission oil<sup>2</sup>
- Propeller shaft (4WD/ AWD/RWD)
- \_\_\_\_ Steering gear and linkage
- Steering linkage ball ioints
- Transfer case oil (4WD/AWD)<sup>2</sup>

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

- 1 The propeller shaft should be re-greased after being immersed in water.
- 2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.
- 3 Except models with 7-speed automatic transmission.

4 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

Equipment varies by model. Perform only those operations that apply to your vehicle.

MAINTENANCE SCHEDULE

### 25,000 MILES OR 30 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
  - Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
  - Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

### 30,000 MILES OR 36 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace engine air filter
- Replace in-cabin microfilter
- Replace CVT Fluid (QX60 Hybrid Electronic Vehicle (HEV)<sup>4</sup>
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- □ Inspect the following:
  - Automatic transmission fluid<sup>2</sup>
  - \_\_\_\_ Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - CVT fluid
  - Differential oil
  - Drive shaft boots (4WD/AWD)
  - --- Manual transmission oil
  - ---- Propeller shaft (4WD/AWD/RWD)
  - \_\_\_\_ Transfer case oil (4WD/AWD)

### Additional Maintenance Items for Severe Operating

- Replace brake fluid
- □ Inspect the following:
  - Axle & suspension parts
  - \_\_\_ Exhaust system
  - ---- Front suspension ball joints
  - \_\_\_\_ Steering gear and linkage
  - \_\_\_\_ Steering linkage ball joints

- □ For Optional Premium Maintenance Upgrade information please see page 39.
- For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.
- 1 The propeller shaft should be re-greased after being immersed in water.
- 2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.
- 3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).
- 4 Mileage Only
- Equipment varies by model. Perform only those operations that apply to your vehicle.

### 35,000 MILES OR 42 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
  - Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
  - Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

### 40,000 MILES OR 48 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace brake fluid
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
- Automatic transmission fluid<sup>2,3</sup>
- \_\_\_\_ Axle & suspension parts
- Brake lines & cables
- Brake calipers, pads, rotors
- Brake light & cruise control switches<sup>4</sup>
- \_\_\_ CVT fluid
- Differential oil<sup>2</sup>
- Drive shaft boots (4WD/ AWD)
- Engine drive belts

- Exhaust system
- Front suspension ball ioints
- Fuel lines/connections
- Fuel tank vapor vent system hoses
- Manual transmission oil<sup>2</sup>
- Propeller shaft (4WD/ AWD/RWD)
- \_\_\_\_ Steering gear and linkage
- Steering linkage ball joints
- Transfer case oil (4WD/AWD)<sup>2</sup>

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

- 1 The propeller shaft should be re-greased after being immersed in water.
- 2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.
- 3 Except models with 7-speed automatic transmission.
- 4 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).
- Equipment varies by model. Perform only those operations that apply to your vehicle.

### 45,000 MILES OR 54 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace in-cabin microfilter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

1 The propeller shaft should be re-greased after being immersed in water.

### 50,000 MILES OR 60 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- **Rotate tires (refer to page 11 for exceptions)**
- Inspect the following:
  - Automatic transmission fluid<sup>2</sup>
  - \_\_\_\_ Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - \_\_\_ CVT fluid
  - \_\_\_ Differential oil
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Manual transmission oil
  - ---- Propeller shaft (4WD/AWD/RWD)
  - Transfer case oil (4WD/AWD)

#### Additional Maintenance Items for Severe Operating 📃 Conditions

- Replace brake fluid
- □ Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - \_\_\_ Exhaust system
  - ---- Front suspension ball joints
  - \_\_\_\_ Steering gear and linkage
  - \_\_\_\_ Steering linkage ball joints

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

- 2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.
- 3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).
- Equipment varies by model. Perform only those operations that apply to your vehicle.

### 55,000 MILES OR 66 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
  - Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
  - Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

### 60,000 MILES OR 72 MONTHS

#### STANDARD MAINTENANCE

- □ Replace engine oil and filter
- Replace engine air filter
- Replace CVT Fluid (QX60 Hybrid Electronic Vehicle (HEV)<sup>5</sup>
- Replace brake fluid
- Replace in-cabin microfilter
- Replace spark plugs (only Q60 IPL)
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- **Rotate tires (refer to page 11 for exceptions)**
- Inspect the following:
- Automatic transmission fluid<sup>2,3</sup>
- \_\_\_\_ Axle & suspension parts
- Brake lines & cables
- Brake calipers, pads, rotors
- Brake light & cruise control switches<sup>4</sup>
- CVT fluid<sup>2</sup>
- Differential oil<sup>2</sup>
- Drive shaft boots (4WD/ AWD)
- ---- Engine drive belts

- Exhaust system
- Front suspension ball joints
- Fuel lines/connections
- Fuel tank vapor vent system hoses
- Manual transmission oil<sup>2</sup>
- --- Propeller shaft (4WD/
- AWD/RWD)
- Steering gear and linkage
- Steering linkage ball joints
- Transfer case oil (4WD/ AWD)<sup>2</sup>
- □ For Optional Premium Maintenance Upgrade information please see page 39.
- □ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

- 3 Except models with 7-speed automatic transmission.
- 4 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).
- 5 Mileage Only
- Equipment varies by model. Perform only those operations that apply to your vehicle.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.

### 65,000 MILES OR 78 MONTHS

#### STANDARD MAINTENANCE

- □ Replace engine oil and filter
  - Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
  - Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

1 The propeller shaft should be re-greased after being immersed in water.

### 70,000 MILES OR 84 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- □ Inspect the following:
  - Automatic transmission fluid<sup>2</sup>
  - \_\_\_\_ Axle & suspension parts
  - \_\_\_\_ Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - \_\_\_ CVT fluid
  - Differential oil
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Manual transmission oil
  - ---- Propeller shaft (4WD/AWD/RWD)
  - Transfer case oil (4WD/AWD)

### Additional Maintenance Items for Severe Operating

- Replace brake fluid
- □ Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - \_\_\_ Exhaust system
  - ---- Front suspension ball joints
  - \_\_\_\_ Steering gear and linkage
  - \_\_\_\_ Steering linkage ball joints

NOTE: Refer to Page 9 for Engine Coolant maintenance information.

- □ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.
- 1 The propeller shaft should be re-greased after being immersed in water.
- 2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.
- 3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).
- Equipment varies by model. Perform only those operations that apply to your vehicle.

### 75,000 MILES OR 90 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace in-cabin microfilter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

### 80,000 MILES OR 96 MONTHS

#### STANDARD MAINTENANCE

- □ Replace engine oil and filter
- Replace brake fluid
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
- Automatic transmission fluid <sup>2</sup>,<sup>3</sup>
- \_\_\_\_ Axle & suspension parts
- Brake lines & cables
- Brake calipers, pads, rotors
- Brake light & cruise control switches<sup>4</sup>
- \_\_\_ CVT fluid
- Differential oil <sup>2</sup>
- Drive shaft boots (4WD/ AWD)
- Engine drive belts
- Exhaust system

- Front suspension ball joints
- Fuel lines/connections
- Fuel tank vapor vent system hoses
- Manual transmission oil<sup>2</sup>
- Propeller shaft (4WD/ AWD/RWD)
- Steering gear and linkage
- Steering linkage ball ioints
- Transfer case oil (4WD/ AWD)<sup>2</sup>

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

- 1 The propeller shaft should be re-greased after being immersed in water.
- 2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.
- 3 Except models with 7-speed automatic transmission.
- 4 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).
- Equipment varies by model. Perform only those operations that apply to your vehicle.

MAINTENANCE SCHEDULE

### 85,000 MILES OR 102 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
  - Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

### 90,000 MILES OR 108 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace engine air filter
- Replace CVT Fluid (QX60 Hybrid Electronic Vehicle (HEV)<sup>4</sup>
- Replace in-cabin microfilter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- □ Inspect the following:
  - Automatic transmission fluid<sup>2</sup>
  - \_\_\_\_ Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - CVT fluid
  - Differential oil
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - --- Manual transmission oil
  - \_\_\_\_ Propeller shaft (4WD/AWD/RWD)
  - \_\_\_\_ Transfer case oil (4WD/AWD)

### Additional Maintenance Items for Severe Operating

- Replace brake fluid
- Inspect the following:
  - Axle & suspension parts
  - \_\_\_ Exhaust system
  - ----- Front suspension ball joints
  - \_\_\_\_ Steering gear and linkage
  - \_\_\_\_ Steering linkage ball joints

NOTE: Refer to Page 9 for Engine Coolant maintenance information.

- □ For Optional Premium Maintenance Upgrade information please see page 39.
- For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.
- 1 The propeller shaft should be re-greased after being immersed in water.
- 2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.
- 3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).
- 4 Mileage Only
- Equipment varies by model. Perform only those operations that apply to your vehicle.

### 95,000 MILES OR 114 MONTHS

#### STANDARD MAINTENANCE

- □ Replace engine oil and filter
  - Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
  - Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating 🔳 Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

### 100,000 MILES OR 120 MONTHS

#### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace brake fluid
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
- Automatic transmission fluid<sup>2,3</sup>
- Axle & suspension parts
- Brake lines & cables
- Brake calipers, pads, rotors
- Brake light & cruise control switches<sup>4</sup>
- \_\_\_ CVT fluid
- Differential oil<sup>2</sup>
- Drive shaft boots (4WD/ AWD)
- Engine drive belts

- Exhaust system
- Front suspension ball joints
- Fuel lines/connections
- Fuel tank vapor vent system hoses
- Manual transmission oil<sup>2</sup>
- Propeller shaft (4WD/ AWD/RWD)
- \_\_\_\_ Steering gear and linkage
- Steering linkage ball joints
- Transfer case oil (4WD/AWD)<sup>2</sup>

- □ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.
- 1 The propeller shaft should be re-greased after being immersed in water.
- 2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.
- 3 Except models with 7-speed automatic transmission.
- 4 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).
- Equipment varies by model. Perform only those operations that apply to your vehicle.

## 105,000 MILES OR 126 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace in-cabin microfilter
- Replace spark plugs (except Q60 IPL)
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- □ Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

NOTE: Refer to Page 9 for Engine Coolant maintenance information.

1 The propeller shaft should be re-greased after being immersed in water.

<sup>□</sup> For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

## 110,000 MILES OR 132 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- □ Inspect the following:
  - Automatic transmission fluid<sup>2</sup>
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - \_\_\_ CVT fluid
  - \_\_\_ Differential oil
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Manual transmission oil
  - Propeller shaft (4WD/AWD/RWD)
  - Transfer case oil (4WD/AWD)

#### Additional Maintenance Items for Severe Operating 📃 Conditions

- Replace brake fluid
- □ Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - \_\_\_ Exhaust system
  - ----- Front suspension ball joints
  - \_\_\_\_ Steering gear and linkage
  - \_\_\_\_ Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.

3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

## 115,000 MILES OR 138 MONTHS

### STANDARD MAINTENANCE

- □ Replace engine oil and filter
  - Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
  - Rotate tires (refer to page 11 for exceptions)

#### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - \_\_\_\_ Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

# 120,000 MILES OR 144 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace engine air filter
- Replace brake fluid
- Replace CVT Fluid (QX60 Hybrid Electronic Vehicle (HEV)<sup>5</sup>
- Replace in-cabin microfilter
- Replace spark plugs (only Q60 IPL)
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- **C** Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
- Automatic transmission fluid<sup>2,3</sup>
- Axle & suspension parts
- Brake lines & cables
- Brake calipers, pads, rotors
- Brake light & cruise control switches<sup>4</sup>
- ---- CVT fluid<sup>2</sup>
- Differential oil<sup>2</sup>
- Drive shaft boots (4WD/ AWD)
- Propeller shaft (4WD/ AWD/RWD)
   Steering gear and linkage
   Steering linkage ball

— Front suspension ball

— Fuel lines/connections

— Fuel tank vapor vent svs-

- Manual transmission oil<sup>2</sup>

ioints

tem hoses

Engine drive belts
 Exhaust system

— Transfer case oil (4WD/AWD)<sup>2</sup>

ioints

NOTE: Refer to Page 10 for Hybrid Electronic Vehicle (HEV) Inverter Coolant maintenance information.

□ For Optional Premium Maintenance Upgrade information please see page 39.

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

- 3 Except models with 7-speed automatic transmission.
- 4 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

5 Mileage Only

<sup>2</sup> Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.

# Optional Premium Maintenance Upgrade

30,000 MILES OR 36 MONTHS	60,000 MILES OR 72 MONTHS
Premium Upgrade adds the following services to Standard	Premium Upgrade adds the following services to Standard
Maintenance:	Maintenance:
Lubricate all locks/hinges	Lubricate all locks/hinges
Replace automatic transmission fluid <sup>1</sup>	Replace automatic transmission fluid <sup>1</sup>
Replace differential oil	Replace differential oil
Replace engine drive belts	Replace engine drive belts
Replace manual transmission oil	Replace manual transmission oil
Replace radiator cap	Replace radiator cap
Replace transfer case oil (4WD/AWD)	Replace transfer case oil (4WD/AWD)
Replace wiper blades	Replace wiper blades
Inspect the following:	Inspect the following:
— All lights	All lights
— Headlights/adjust if necessary	Headlights/adjust if necessary

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 Except models with 7-speed automatic transmission.

# **Optional Premium Maintenance Upgrade**)

90,000 MILES OR 108 MONTHS	120,000 MILES OR 144 MONTHS
Premium Upgrade adds the following services to Standard	Premium Upgrade adds the following services to Standard
Maintenance:	Maintenance:
Lubricate all locks/hinges	Lubricate all locks/hinges
Replace automatic transmission fluid <sup>1</sup>	Replace automatic transmission fluid <sup>1</sup>
Replace differential oil	Replace differential oil
Replace engine drive belts	Replace engine drive belts
Replace manual transmission oil	Replace manual transmission oil
Replace raniator cap	Replace radiator cap
Replace transfer case oil (4WD/AWD)	Replace transfer case oil (4WD/AWD)
Replace wiper blades	Replace wiper blades
Inspect the following:	Inspect the following:
— All lights	All lights
— Headlights/adjust if necessary	Headlights/adjust if necessary

🗆 For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 Except models with 7-speed automatic transmission.

Equipment varies by model. Perform only those operations that apply to your vehicle.

# HEV Li-ion BATTERY REPLACEMENT RECORD

When replacing the Li-ion battery pack or module, be sure to record the ID in the space provided. In addition, when replacing 12 modules, record the oldest module ID.

New module ID	
Module production date	
Location at replacement modul	le No.
Date	
Mieage at replacement	Mies
Dealer name or signature	

Periation       Replace 12 modules         New module ID		Replace the Li-ion battery pack     Li-ion battery pack ID     Plant/Line Ser No.
Mileage at replacement Miles Deater name or signature When replacing 1 module New module ID Module production date Location at replacement module No. Date: Mileage at replacement Miles	eration	New module ID
New module ID Nodule production date Location at replacement module No. Date: Meage at replacement Meas		
Location at replacement module No. Date: Mieage at replacement Miles	Mieag	
Mieage at replacement Mies	Mileag Deale When New	r name or signature
	Mieag Deale When New 1 Modu	r name or signature replacing 1 module module ID

# HEV Li-ion BATTERY REPLACEMENT RECORD)

	Replace the Li-ion battery pack Li-ion battery pack ID     Plant/Line Ser No.	Operation	Replace the Li-lon battery pack Li-lon battery pack ID     Plant/Line Ser No.
ition			Replace 12 modules     New module ID     Module production date
	e at replacement Mies		x age at replacement Miles
reale	r name or signature		
Vhen	replacing 1 module		n replacing 1 module
New	module ID	Nev	In replacing 1 module Imodule ID
New I		Nev Mo	v module ID
New i Modu Local Date: Alleag	module ID	New Mox Loc Date	v module ID
New i Modu Local Date: Alleag	module ID	New Mox Loc Date	x module ID

5,000 Miles or 6 Months Dealer Name: Date: Mileage: Dealer Stamp:	<b>10,000 Miles or 12 Months</b> Dealer Name:         Date:         Mileage:         Dealer         Stamp:	15,000 Miles or 18 Months         Dealer Name:         Date:         Mileage:         Dealer         Stamp:
20,000 Miles or 24 Months Dealer Name: Date: Mileage: Dealer Stamp:	25,000 Miles or 30 Months Dealer Name: Date: Mileage: Dealer Stamp:	30,000 Miles or 36 Months Dealer Name: Date: Mileage: Dealer Stamp:
35,000 Miles or 42 Months Dealer Name: Date: Mileage: Dealer Stamp:	40,000 Miles or 48 Months         Dealer Name:         Date:         Mileage:         Dealer         Stamp:	45,000 Miles or 54 Months         Dealer Name:         Date:         Mileage:         Dealer         Stamp:

50,000 Miles or 60 Months Dealer Name: Date: Mileage: Dealer Stamp:	55,000 Miles or 66 Months Dealer Name: Date: Mileage: Dealer Stamp:	60,000 Miles or 72 Months Dealer Name: Date: Mileage: Dealer Stamp:
65,000 Miles or 78 Months Dealer Name: Date: Mileage: Dealer Stamp:	70,000 Miles or 84 Months Dealer Name: Date: Mileage: Dealer Stamp:	75,000 Miles or 90 Months Dealer Name: Date: Mileage: Dealer Stamp:
80,000 Miles or 96 Months Dealer Name: Date: Mileage: Dealer Stamp:	85,000 Miles or 102 Months Dealer Name: Date: Mileage: Dealer Stamp:	90,000 Miles or 108 Months Dealer Name: Date: Mileage: Dealer Stamp:

<b>95,000 Miles or 114 Months</b> Dealer Name: Date: Mileage:	100,000 Miles or 120 Months         Dealer Name:         Date:         Mileage:	<b>105,000 Miles or 126 Months</b> Dealer Name:         Date:         Mileage:
Dealer Stamp:	Dealer Stamp:	Dealer Stamp:
<b>110,000 Miles or 132 Months</b> Dealer Name:         Date:         Mileage:         Dealer         Stamp:	115,000 Miles or 138 Months         Dealer Name:         Date:         Mileage:         Dealer         Stamp:	120,000 Miles or 144 Months         Dealer Name:         Date:         Mileage:         Dealer         Stamp:



